

SVAN 912AE

USER MANUAL

SVANTEK *Ltd.*

Warsaw, August 2001



Note: This is the user manual for software version 2.02 (cf. the description of the **INFORMATION** window in the **AUXILIARY FUNCTIONS MODE** – Chapter 7). Some of the Figures displayed within this manual may not be valid with newer software versions.

Contents

1. INTRODUCTION	1 - 1
2. SETTING OF THE INSTRUMENT	2 - 1
2.1 Powering of the instrument	2 - 1
3. MANUAL CONTROL OF THE INSTRUMENT	3 - 1
3.1. Control push-buttons on the front panel	3 - 1
3.2. Measurement functions of the instrument	3 - 3
4. METER MODE	4 - 1
4.1. Sound measurement	4 - 1
4.2. Vibration measurement	4 - 19
4.3. Voltage measurement	4 - 35
4.4. Internal reference voltage measurement	4 - 36
5. ANALYZER MODE	5 - 1
5.1. Narrow band frequency analysis (FFT)	5 - 3
5.2. Frequency analysis in the 1/1 & 1/3 octave bands	5 - 17
5.3. Time wave forms analysis	5 - 31
6. CALIBRATION	6 - 1
6.1. Calibration procedures of the instrument	6 - 4
7. AUXILIARY FUNCTIONS MODE	7 - 1
7.1. Input / output setup	7 - 2
7.2. Printer interface	7 - 3
7.3. Data & time setting	7 - 4
7.4. Battery	7 - 4
7.5. Specification of the standards fulfilled by the instrument (INFORMATION)	7 - 5
7.6. Erase files	7 - 6
7.7. SETUP mode	7 - 6
7.8. Polarisation voltage setting of the condenser microphone	7 - 7
7.9. Data buffer size setting	7 - 7
7.10. Shift mode	7 - 8
7.11. Meaning of the first line in the FFT spectrum	7 - 8
7.12. Metric units mode	7 - 9
APPENDIX A: REMOTE CONTROL	A - 1
INPUT / OUTPUT transmission types	A - 1
Function #1 - input/output of the control settings codes	A - 1
Function #2 - read out of the measurement data in the METER MODE	A - 2
Function #3 - read out of the measurement data in the ANALYZER MODE	A - 2

Contents

Function #4 - output (read out) of the data files from the internal "RAM-disk"	A - 3
Function #5 - input (write to) of the data files to the internal "RAM-disk"	A - 4
Function #6 – control settings of the SV 06A and SV 08A modules	A - 4
APPENDIX B: DATA FILE STRUCTURES	B - 1
B1. Structure of the data file in the METER MODE	B - 1
B2. Structure of the data file in the ANALYZER MODE	B - 6
APPENDIX C: DATA SPECIFICATIONS	C - 1
C1. SVAN 912AE handheld sound & vibration analyser	C - 1
C2. System for sound measurements	C - 9
C3. System for vibration measurements	C - 12
APPENDIX D: FREQUENCY CHARACTERISTICS OF DIGITAL FILTERS IMPLEMENTED IN THE SVAN 912AE INSTRUMENT	D - 1
D1. Frequency characteristics of the digital filters for sound measurements	D - 2
D2. Characteristics of the filters for the vibration acceleration measurements	D - 4
D3. Characteristics of the filters for the vibration velocity measurements	D - 7
D4. Characteristics of the filters for the vibration displacement measurements	D - 9
D5. Characteristics of the digital 1/1 octave and 1/3 octave filters	D - 11
APPENDIX E: FOUR CHANNEL VIBRATION MEASUREMENTS WITH THE SV 06A OR SV 08A MODULES	E - 1
Application	E - 1
Getting started	E - 1
Powering	E - 1
Control push-buttons of the SV 06A module	E - 2
Control push-buttons of the SV 08A module	E - 3
Selecting of the SV 06A or SV 08A module	E - 5
E1. Four channel vibration measurements with the SV 06A and SV 08A modules in the METER MODE	E - 6
E2. Four channel sound measurements with the SV 08A module in the METER MODE	E - 11
E3. Four channel sound & vibration measurements with the SV 06A and SV 08A modules in the ANALYZER MODE	E - 15
E4. Storing measurement results	E - 17
E5. Calibration	E - 17
E6. Data specifications of the SV 06A module	E - 18
E7. Data specifications of the SV 08A module	E - 23
E8. System for vibration measurements with the SV 06A module	E - 29
E9. System for vibration measurements with the SV 08A module	E - 36