

# **SVAN 943**

**SOUND LEVEL METER / ANALYSER /  
DOSE METER**

**USER'S MANUAL**

***SVANTEK Ltd.***

***WARSAW, November 2002***

# CONTENTS

---

1. INTRODUCTION	1 - 1
<i>Main features of the SVAN 943</i>	1 - 2
2. MANUAL CONTROL OF THE INSTRUMENT	2 - 1
2.1. CONTROL PUSH-BUTTONS ON THE FRONT PANEL	2 - 1
2.2. INPUT AND OUTPUT SOCKETS OF THE INSTRUMENT	2 - 4
3. SETTING OF THE INSTRUMENT	3 - 1
3.1. BASIS OF THE INSTRUMENT'S CONTROL	3 - 1
3.2. POWERING OF THE INSTRUMENT	3 - 12
3.2. INITIAL SETUP OF THE INSTRUMENT	3 - 13
4. MEASUREMENT FUNCTIONS OF THE INSTRUMENT	4 - 1
4.1. CALIBRATION	4 - 3
<i>Calibration procedure of the instrument</i>	4 - 3
4.2. SOUND LEVEL METER	4 - 5
<i>One profile mode of measurement results presentation</i>	4 - 7
<i>3 PROFILES mode of measurement results presentation</i>	4 - 8
<i>Presentation of the statistical analysis results – STATISTICS</i>	4 - 8
<i>Presentation of time history – PLOT</i>	4 - 9
4.2.1. Measurement parameters setting	4 - 11
<i>Measurement parameters setting – INPUT window</i>	4 - 11
<i>Selection of measurement parameters – MEASURE SETUP sub-window</i>	4 - 11
<i>Setting time delay before the start of measurements – START DELAY</i>	4 - 12
<i>Setting the integration time – INT. TIME</i>	4 - 12
<i>Setting number of repetition of measurement cycles – REP. CYCLE</i>	4 - 13
<i>Setting time between two writings to the buffer's file – BUF. STEP</i>	4 - 14
<i>Setting parameters in profiles for SLM mode – PROFILES SETUP window</i>	4 - 14
<i>Setting parameters in a profile – PROFILE x sub-window</i>	4 - 14
<i>Selection of the weighting filter in SLM – FILTER</i>	4 - 15
<i>Selection of the RMS detector – DETECTOR</i>	4 - 15
<i>Selection of the SLM result to be saved in the buffer's file – BUFFER</i>	4 - 15
<i>Selection of the measurement range in SLM – RANGE window</i>	4 - 16
<i>Selection of mode and parameters of triggering – TRIGGER SETUP window</i>	4 - 17
<i>Switching the triggering on and off – TRIGGER</i>	4 - 17
<i>Selection of the triggering signal – SOURCE</i>	4 - 18
<i>Setting the level of triggering – TRG. LEVEL</i>	4 - 18
4.3. ACTIVATION OF OPTIONAL FUNCTIONS	4 - 20
4.4. 1/1 OCTAVE ANALYSER	4 - 21
<i>Selection of the measurement range in 1/1 OCTAVE analysis – RANGE</i>	4 - 24

<i>Selection of 1/1 OCTAVE analysis parameters – SPECTRUM window</i>	4 - 25
<i>Selection of the weighting filter in 1/1 OCTAVE analysis – FILTER</i>	4 - 25
<i>Selection of 1/1 OCTAVE analysis result to be saved in the buffer's file – BUFFER</i>	4 - 26
4.5. 1/3 OCTAVE ANALYSER	4 - 27
<i>Selection of the measurement range in 1/3 OCTAVE analysis – RANGE</i>	4 - 30
<i>Selection of 1/3 OCTAVE analysis parameters – SPECTRUM window</i>	4 - 31
<i>Selection of the weighting filter in 1/3 OCTAVE analysis – FILTER</i>	4 - 31
<i>Selection of 1/3 OCTAVE analysis result to be saved in the buffer's file – BUFFER</i>	4 - 32
4.6. DOSE METER MODE	4 - 33
<i>Setting time during which a wearer is exposed to the noise – EXPOSURE TIME</i>	4 - 34
<i>Setting acceptable level of whole day noise dose – CRITERION LEVEL</i>	4 - 34
<i>Setting threshold level of sound – THRESHOLD LEVEL</i>	4 - 35
<i>Setting the exchange rate – EXCHANGE RATE</i>	4 - 35
<i>The DOSE METER mode measurements</i>	4 - 36
5. AUXILIARY FUNCTIONS	5 - 1
5.1. DATA AVAILABLE ON THE SCREEN – DISPLAY WINDOW	5 - 1
<i>Selection of the modes of measurement results presentation – DISPLAY MODES window</i>	5 - 1
<i>Selection of the scale in graphical results presentation – DISPLAY SCALE window</i>	5 - 2
<i>Scaling of the vertical axis of the graphical presentation – DYNAMIC</i>	5 - 2
<i>Scaling of the horizontal axis of the graphical presentation – X-ZOOM</i>	5 - 3
<i>Selection of the buffer's file to the screen presentation – BUFFER VIEW window</i>	5 - 3
<i>Checking the state of the internal battery – BATTERY window</i>	5 - 5
<i>Setting the contrast of the screen – CONTRAST window</i>	5 - 6
<i>Checking specification of the instrument – UNIT LABEL window</i>	5 - 7
5.2. SETUP MENU	5 - 8
<i>Programming of the instrument's internal timer – TIMER window</i>	5 - 8
<i>Programming of the instrument's internal Real Time Clock – RTC window</i>	5 - 9
<i>Setting the parameters of the serial interface – RS232 window</i>	5 - 10
<i>Setting the transmission speed of the serial interface – BAUD RATE</i>	5 - 10
<i>Setting time limit for the performance of serial interface operation – TIME OUT</i>	5 - 10
<i>Selection of few push-button's mode – SHIFT MODE window</i>	5 - 11
<i>Selection of the working mode of &lt;SHIFT&gt; push-button – SHIFT</i>	5 - 11
<i>Selection of the working mode of &lt;PAUSE&gt; push-button – PAUSE</i>	5 - 11
<i>Return to the factory made settings – CLEAR SETUP window</i>	5 - 12
<i>Selection of detector's type in the LEQ calculations – LEQ INTEGRATION window</i>	5 - 12
<i>Selection of the warnings – WARNINGS window</i>	5 - 13
<i>Saving the measurement results in a file – RES.NOT SAVE</i>	5 - 13
5.3. SAVING THE MEASUREMENT RESULTS	5 - 15
<i>Saving files</i>	5 - 15
<i>Selection of the file's operation – FILE window</i>	5 - 16

<i>Saving files in the instrument's memory – SAVE and SAVE NEXT windows</i>	5 - 16
<i>Controlling the data storing in the instrument's memory – SAVE OPTIONS window</i>	5 - 19
<i>Replacement of the existing files by the new ones – REPLACE</i>	5 - 19
<i>Controlling of the measurement statistics savings – SAVE STAT.</i>	5 - 19
<i>Controlling of the measurement results savings – AUTO SAVE</i>	5 - 20
<i>Loading the files with the measurement results – LOAD window</i>	5 - 20
<i>Removing a file with the measurement results from memory – DELETE window</i>	5 - 21
<i>Removing all files with measurement results from memory – DELETE ALL window</i>	5 - 22
<i>Removing all files with results from buffer's memory – CLEAR BUFFER window</i>	5 - 23
<i>Checking the contents of the memory – CATALOGUE window</i>	5 - 23
<i>Checking the free space in the memory – FREE SPACE window</i>	5 - 24
<i>Operations in buffer</i>	5 - 25
<b>5.4. PRINTING REPORTS</b>	5 - 27
<i>Selection of the functions for printing out the results</i>	5 - 27
<i>Edition of the user's text to be added to the reports – TITLE window</i>	5 - 27
<i>Printing of the measurement results – PRINT RESULTS window</i>	5 - 28
<i>Printing of the file's catalogue – PRINT CATALOGUE window</i>	5 - 29
<i>Printing of the statistics of measurement results – PRINT STATISTICS window</i>	5 - 29
<i>Printing of the measurement results from the selected file – PRINT FILE window</i>	5 - 30
<i>Printing of the results from the selected buffer's file – PRINT BUFFER window</i>	5 - 31
<i>Selection of the printing options – OPTIONS window</i>	5 - 33
<i>Selection of the format of the print out – FORMAT</i>	5 - 33
<i>Controlling the paper ejection after print out – EJECT P.</i>	5 - 33
<i>Selection of the language of the printed report – LANGUAGE</i>	5 - 34
 <b>APPENDIX A. REMOTE CONTROL</b>	 A - 1
INPUT / OUTPUT TRANSMISSION TYPES	A - 1
FUNCTION #1 – INPUT / OUTPUT OF THE CONTROL SETTING CODES	A - 1
FUNCTION #2 – READ OUT OF THE MEASUREMENT RESULTS IN THE SLM AND THE DOSE METER MODE	A - 2
FUNCTION #3 – READ OUT OF THE MEASUREMENT RESULTS IN 1/1 OCTAVE & 1/3 OCTAVE MODE	A - 4
FUNCTION #4 – READ OUT OF THE DATA FILE FROM THE INTERNAL FLASH DISC	A - 4
FUNCTION #5 – READ OUT OF THE STATISTICAL ANALYSIS RESULTS	A - 5
CONTROL SETTING CODES	A - 6
 <b>APPENDIX B. DATA FILE STRUCTURES</b>	 B - 1
B.1. GENERAL STRUCTURE OF THE SVAN 943 FILE	B - 1
B.2. STRUCTURE OF THE FILE WITH THE RESULTS FROM THE SLM MODE	B - 8
B.3. STRUCTURE OF THE FILE WITH 1/1 OCTAVE ANALYSIS RESULTS	B - 8

B.4. STRUCTURE OF THE FILE WITH 1/3 OCTAVE ANALYSIS RESULTS	B - 8
B.5. STRUCTURE OF THE FILE CONTAINING RESULTS FROM BUFFER'S FILE	B - 9
B.5.1. The contents of the files in the buffer	B - 9
B.5.1.1. Record with the results	B - 9
B.5.1.2. Record with the state of the markers	B - 10
B.5.1.3. Records with the breaks in the results registration	B - 10
APPENDIX C. TECHNICAL SPECIFICATION	C - 1
C.1. SPECIFICATION OF SOUND LEVEL METER	C - 1
C.2. SPECIFICATION OF 1/1 OCTAVE AND 1/3 OCTAVE ANALYSER	C - 3
C.3. REMAINING TECHNICAL DATA	C - 6
APPENDIX D. DEFINITIONS AND FILTER CHARACTERISTICS	D - 1
D.1. DEFINITIONS AND FORMULAE	D - 1
D.1.1. Basic symbols and notation	D - 1
D.1.2. Definitions of the values, functions and results in SLM mode	D - 2
D.1.3. Definitions of the results measured in DOSE METER mode	D - 4
D.2. CHARACTERISTICS OF DIGITAL FILTERS IMPLEMENTED IN SVAN 943	D - 7
APPENDIX E. FORMATS OF PRINTED REPORTS	E - 1
PRINTING OF THE CATALOGUE OF THE FILES SAVED IN THE SVAN 943 - PRINT CATALOGUE	E - 2
<i>The exemplary listing of a catalogue of the files in A4 format</i>	E - 2
<i>The exemplary listing of a catalogue of the files in A5 format</i>	E - 2
PRINTING OF THE REPORT FROM THE MEASUREMENTS - PRINT RESULTS	E - 2
<i>The exemplary listing of the report from the SLM measurements in A4 format</i>	E - 2
<i>The exemplary listing of the report from the SLM measurements in A5 format</i>	E - 3
<i>The exemplary listing of the report from 1/1 OCTAVE analysis in A4 format</i>	E - 3
<i>The exemplary listing of the report from 1/1 OCTAVE analysis in A5 format</i>	E - 5
<i>The exemplary listing of the report from 1/3 OCTAVE analysis in A4 format</i>	E - 7
<i>The exemplary listing of the report from 1/3 OCTAVE analysis in A5 format</i>	E - 7
PRINTING OF THE STATISTICS OF THE MEASUREMENTS REPORT - PRINT STATISTICS	E - 8
<i>The exemplary report of the statistics of the DOSE METER measurements in A4 format</i>	E - 8
<i>The exemplary report of the statistics of the DOSE METER measurements in A5 format</i>	E - 9
PRINTING OF THE SELECTED FILE CONTENTS - PRINT FILE	E - 11
<i>The exemplary listing of the file with the DOSE METER results in A4 format</i>	E - 11
<i>The exemplary listing of the file with the DOSE METER results in A5 format</i>	E - 12
<i>The exemplary listing of the file with 1/3 OCTAVE analysis results in A4 format</i>	E - 12
<i>The exemplary listing of the file with 1/1 OCTAVE analysis results in A5 format</i>	E - 13
PRINTING OF THE CONTENTS OF THE SELECTED FILE FROM THE BUFFER - PRINT BUFFER	E - 14
<i>The exemplary report of the buffer's file with the DOSE METER results in A4 format</i>	E - 14
<i>The exemplary report of the buffer's file with the DOSE METER results in A5 format</i>	E - 15



**Notice:** *This user's manual presents the software version named 3.01 (cf. the description of the **UNIT LABEL** option of the **DISPLAY** window). The succeeding software versions (marked with the bigger numbers) can slightly change the view of some screens presented in the text of the manual.*

## INDEX OF WINDOWS AND THEIR ELEMENTS

1/1 OCTAVE	Selection of 1/1 OCTAVE analysis, element of MEASUREMENT FUNCTION window	4 - 21
1/3 OCTAVE	Selection of 1/3 OCTAVE analysis, element of MEASUREMENT FUNCTION window	4 - 27
3 PROFILES	Measurement results presentation mode (numerical), element of DISPLAY MODES window	5 - 1
AUTO SAVE	Controlling of measurement results savings, element of SAVE OPTIONS window	5 - 20
BATTERY	Checking the state of the internal battery, element of DISPLAY window	5 - 5
BAUD RATE	Setting the transmission speed of the serial interface, element of RS232 window	5 - 10
BUF. STEP	Setting time between two writings to the buffer's file, element of MEASURE SETUP window	4 - 14
BUFFER	Selection of the SLM result to be saved in the buffer's file, element of PROFILE x window	4 - 15
BUFFER	Selection of 1/1 OCTAVE analysis result to be saved in the buffer's file, element of SPECTRUM window	4 - 26
BUFFER	Selection of 1/3 OCTAVE analysis result to be saved in the buffer's file, element of SPECTRUM window	4 - 32
BUFFER VIEW	Selection of the buffer's file to the screen presentation, sub-window of DISPLAY window	5 - 3
CAL. LEVEL	Setting the level of the calibrator's signal, element of CALIBRATION window	4 - 3
CALIBRATION	Calibration of sound measurement channel, sub-window of FUNCTION window	4 - 3
CATALOGUE	Controlling the contents of the memory, element of FILE window	5 - 23
CLEAR BUFFER	Removing all files with the results from buffer's memory, element of FILE window	5 - 23
CLEAR SETUP	Return to the factory made settings, element of SETUP window	5 - 12
CONTRAST	Setting the contrast of the screen, element of DISPLAY window	5 - 6
CRITERION LEVEL	Setting acceptable level of whole day noise dose, element of DOSEMETER SETUP window	4 - 34
DELETE	Removing a file with the results from instrument's memory, element of FILE window	5 - 21
DELETE ALL	Removing all files from instrument's memory, element of FILE window	5 - 22
DETECTOR	Selection of the RMS detector, element of PROFILE x window	4 - 15
DISPLAY	Data available on the screen, main window (function of the push-button)	5 - 1
DISPLAY MODES	Selection of the ways of measurement results presentation, sub-window of DISPLAY window	5 - 1
DISPLAY SCALE	Selection of the scale in graphical results presentations, sub-window of DISPLAY window	5 - 3
DOSE METER	Selection of DOSE METER mode, element of MEASUREMENT FUNCTION window	4 - 33
DOSEMETER SETUP	Setting the parameters of DOSE METER mode, element of INPUT window	4 - 33
DYNAMIC	Scaling of the vertical axis of the graphical presentation, element of DISPLAY SCALE window	5 - 3
ENTER CODE	Access to optional functions	4 - 20
EJECT P.	Controlling the paper ejection after print out, element of OPTIONS window	5 - 33
EXCHANGE RATE	Setting the exchange rate, element of DOSEMETER SETUP window	4 - 35
EXPOSURE TIME	Setting time during which a wearer is exposed to the noise, element of DOSEMETER SETUP window	4 - 34
FILE	Available operations on files, main window (function of the push-button)	5 - 16
FILE NAME	Edition of the file name in which the measurement results has to be saved	5 - 16
FILTER	Selection of the weighting filter in SLM, element of PROFILE x window	4 - 15
FILTER	Selection of the weighting filter in 1/1 OCTAVE analysis, element of SPECTRUM window	4 - 25
FILTER	Selection of the weighting filter in 1/3 OCTAVE analysis, element of SPECTRUM window	4 - 31

FORMAT	<i>Selection of the format of the print out, element of OPTIONS window</i>	5 - 33
FREE SPACE	<i>Checking the free space in the memory, element of FILE window</i>	5 - 32
FUNCTION	<i>Selection of the unit's measurement function, main window (function of the push-button)</i>	4 - 5
INPUT	<i>Measurement parameters setting, main window (function of the push-button)</i>	4 - 11
INT. TIME	<i>Setting the integration time, element of MEASURE SETUP window</i>	4 - 12
LANGUAGE	<i>Selection of the language of the printed report, element of OPTIONS window</i>	5 - 34
LEQ INTEGRATION	<i>Selection of detector's type in the LEQ calculations, element of SETUP window</i>	5 - 12
LEVEL METER	<i>Selection of SLM function, element of MEASUREMENT FUNCTION window</i>	4 - 5
OPTIONS	<i>Selection of the printing options, sub-window of REPORT window</i>	5 - 33
MEASUR. FUNCTION	<i>Selection of the available measurement function, sub-window of FUNCTION window</i>	4 - 5
MEASURE SETUP	<i>Selection of measurement parameters, sub-window of INPUT window</i>	4 - 11
PAUSE	<i>Selection of the working mode of &lt;PAUSE&gt; push-button, element of SHIFT MODE window</i>	5 - 11
PLOT	<i>Measurement results presentation mode (graphical), element of DISPLAY MODES window</i>	5 - 1
PRINT BUFFER	<i>Printing of the results from the selected buffer's file, element of REPORT window</i>	5 - 31
PRINT CATALOGUE	<i>Printing of the file's catalogue, element of REPORT window</i>	5 - 30
PRINT FILE	<i>Printing of the measurement results from the selected file, element of REPORT window</i>	5 - 30
PRINT RESULTS	<i>Printing of the measurement results, element of REPORT window</i>	5 - 28
PRINT STATISTICS	<i>Printing of the statistics of measurement results, element of REPORT window</i>	5 - 29
PROFILE x	<i>Setting parameters in a profile of SLM, sub-window of PROFILES SETUP window</i>	4 - 14
PROFILES SETUP	<i>Setting parameters in profiles and for octave analysis, sub-window of INPUT window</i>	4 - 14
RANGE	<i>Selection of the measurement range in SLM, element of INPUT window</i>	4 - 16
RANGE	<i>Selection of the measurement range in 1/1 OCTAVE analysis, element of INPUT window</i>	4 - 24
RANGE	<i>Selection of the measurement range in 1/3 OCTAVE analysis, element of INPUT window</i>	4 - 30
REP. CYCLE	<i>Setting number of repetition of measurement cycles, element of MEASURE SETUP window</i>	4 - 13
REPLACE	<i>Replacement of the existing files by the new ones, element of SAVE OPTIONS window</i>	5 - 19
REPORT	<i>Printing reports, main window (function of the push-button)</i>	5 - 27
RS232	<i>Setting the parameters of the serial interface, sub-window of SETUP window</i>	5 - 10
RTC	<i>Programming of the instrument's internal Real Time Clock, element of RTC window</i>	5 - 09
SAVE	<i>Saving files in the instrument's memory, element of FILE window</i>	5 - 16
SAVE NEXT	<i>Saving files in the memory with the name's modification, element of FILE window</i>	5 - 16
SAVE OPTIONS	<i>Controlling of the data storing in the instrument's memory, sub-window of FILE window</i>	5 - 19
SAVE STAT.	<i>Controlling of the statistics savings, element of SAVE OPTIONS window</i>	5 - 19
SETUP	<i>Settings of the instrument's parameters, main window (function of the push-button)</i>	5 - 8
SHIFT	<i>Selection of the working mode of &lt;SHIFT&gt; push-button, element of SHIFT MODE window</i>	5 - 11
SHIFT MODE	<i>Selection of few push-button's mode, sub-window of SETUP window</i>	5 - 11
SOURCE	<i>Selection of the triggering signal, element of TRIGGER SETUP window</i>	4 - 18
SPECTRUM	<i>Measurement results presentation mode (graphical), element of DISPLAY MODES window</i>	5 - 1
SPECTRUM	<i>Selection of 1/1 OCTAVE analysis parameters, sub-window of PROFILES SETUP window</i>	4 - 25
SPECTRUM	<i>Selection of 1/3 OCTAVE analysis parameters, sub-window of PROFILES SETUP window</i>	4 - 31

START DELAY	<i>Setting start delay before the start of measurement, element of MEASURE SETUP window</i>	4 - 12
STATISTICS	<i>Measurement results presentation mode (graphical), element of DISPLAY MODES window</i>	5 - 1
THRESHOLD LEVEL	<i>Setting threshold level of sound, element of DOSEMETER SETUP window</i>	4 - 35
TIME OUT	<i>Setting time limit for the performance of serial interface operation, element of RS232 window</i>	5 - 10
TIMER	<i>Programming of the instrument's internal timer, element of SETUP window</i>	5 - 8
TITLE	<i>Edition of the user's text to be added to the reports, element of REPORT window</i>	5 - 27
TRG. LEVEL	<i>Selection of the triggering mode, element of TRIGGER SETUP window</i>	4 - 18
TRIGGER	<i>Switching triggering on and off, element of TRIGGER SETUP window</i>	4 - 17
TRIGGER SETUP	<i>Selection of mode and parameters of triggering, sub-window of INPUT window</i>	4 - 17
UNIT LABEL	<i>Checking specification of the instrument, element of DISPLAY window</i>	5 - 7
X-ZOOM	<i>Scaling of the horizontal axis of the graphical presentation, element of DISPLAY SCALE window</i>	5 - 3