

# **SVAN 945**

## **USER'S MANUAL**

***SVANTEK Ltd.***

***WARSAW, June 2001***

# CONTENTS

---

1. INTRODUCTION	1 - 1
<i>Main features of the SVAN 945</i>	1 - 2
2. MANUAL CONTROL OF THE INSTRUMENT	2 - 1
2.1. CONTROL PUSH-BUTTONS ON THE FRONT PANEL	2 - 1
2.2. INPUT AND OUTPUT SOCKETS OF THE INSTRUMENT	2 - 4
3. SETTING OF THE INSTRUMENT	3 - 1
3.1. POWERING OF THE INSTRUMENT	3 - 1
3.2. INITIAL SETUP OF THE INSTRUMENT	3 - 2
4. MEASUREMENT FUNCTIONS OF THE INSTRUMENT	4 - 1
4.1. CALIBRATION	4 - 3
<i>Calibration procedure of the instrument</i>	4 - 3
4.2. SOUND LEVEL METER	4 - 5
4.1.1. Measurement parameters setting	4 - 8
<i>Measurement parameters setting - INPUT list</i>	4 - 8
<i>Selection of measurement parameters - MEASURE SETUP sub-list</i>	4 - 9
<i>Setting time delay before the start of measurements - START DELAY position</i>	4 - 9
<i>Setting the integration time - INT. TIME position</i>	4 - 9
<i>Controlling of the repetition of measurements - AUTO REPEAT position</i>	4 - 10
<i>Setting time between two writings to the buffer's file - BUF. STEP position</i>	4 - 10
<i>Setting number of repetition of measurement cycles - REP. CYCLE position</i>	4 - 10
<i>Setting parameters in profiles - PROFILES SETUP sub-list</i>	4 - 11
<i>Setting parameters in a profile - PROFILE x sub-list</i>	4 - 11
<i>Selection of the weighting filter in SLM - FILTER position</i>	4 - 11
<i>Selection of the RMS detector - DETECTOR position</i>	4 - 11
<i>Selection of the SLM result to be saved in the buffer's file - BUFFER position</i>	4 - 12
<i>Selection of the measurement range in SLM - RANGE position</i>	4 - 12
<i>Selection of mode and parameters of triggering - TRIGGER SETUP sub-list</i>	4 - 12
<i>Switching the triggering on and off - TRIGGER position</i>	4 - 13
<i>Setting the level of triggering - TRG. LEVEL position</i>	4 - 13
<i>Selection of the triggering mode - MODE position</i>	4 - 13
4.3. ACTIVATION OF OPTIONAL FUNCTIONS	4 - 15
4.4. 1/1 OCTAVE ANALYSER	4 - 16
<i>Selection of the measurement range in 1/1 OCTAVE analysis - RANGE position</i>	4 - 17
<i>Selection of 1/1 OCTAVE analysis parameters - SPECTRUM sub-list</i>	4 - 18
<i>Selection of the weighting filter in 1/1 OCTAVE analysis - FILTER position</i>	4 - 18
<i>Selection of 1/1 OCTAVE analysis result to be saved in the buffer's file - BUFFER position</i>	4 - 18

4.5. 1/3 OCTAVE ANALYSER	4 - 20
<i>Selection of the measurement range in 1/3 OCTAVE analysis - RANGE position</i>	4 - 21
<i>Selection of 1/3 OCTAVE analysis parameters - SPECTRUM sub-list</i>	4 - 22
<i>Selection of the weighting filter in 1/3 OCTAVE analysis - FILTER position</i>	4 - 22
<i>Selection of 1/3 OCTAVE analysis result to be saved in the buffer's file - BUFFER position</i>	4 - 22
4.6. LOUDNESS MEASUREMENT	4 - 24
<b>5. AUXILIARY FUNCTIONS</b>	<b>5 - 1</b>
5.1. DATA AVAILABLE ON THE SCREEN – DISPLAY LIST	5 - 1
<i>Selection of the ways of measurement results presentation – DISPLAY sub-list</i>	5 - 1
<i>Selection of the scale in graphical results presentation - DISPLAY SCALE sub-list</i>	5 - 2
<i>Scaling of the vertical axis of the graphical presentation – Y-SCALE position</i>	5 - 2
<i>Scaling of the horizontal axis of the graphical presentation – X-ZOOM position</i>	5 - 2
<i>Selection of the buffer's file to the screen presentation – BUFFER VIEW sub-list</i>	5 - 3
<i>Checking the state of the internal battery – BATTERY position</i>	5 - 4
<i>Setting the contrast of the screen – CONTRAST position</i>	5 - 4
<i>Checking specification of the instrument – UNIT LABEL position</i>	5 - 5
5.2. SETUP MENU	5 - 6
<i>Programming of the instrument's internal timer – TIMER position</i>	5 - 6
<i>Programming of the instrument's internal Real Time Clock – RTC position</i>	5 - 7
<i>Setting the parameters of the serial interface – RS232 sub-list</i>	5 - 7
<i>Setting the transmission speed of the serial interface – BAUD RATE position</i>	5 - 7
<i>Setting time limit for the performance of serial interface operation – TIME OUT position</i>	5 - 7
<i>Selection of the voltage polarisation of the microphone – MIC. POLAR. position</i>	5 - 8
<i>Selection of few push-button's mode – SHIFT MODE sub-list</i>	5 - 8
<i>Selection of the working mode of &lt;SHIFT&gt; push-button – SHIFT position</i>	5 - 8
<i>Selection of the working mode of &lt;PAUSE&gt; push-button – PAUSE position</i>	5 - 8
<i>Return to the factory made settings – CLEAR SETUP position</i>	5 - 9
<i>Selection of detector's type in the LEQ calculations – LEQ INTEGRATION position</i>	5 - 9
5.3. SAVING THE MEASUREMENT RESULTS	5 - 11
<i>Saving files</i>	5 - 11
<i>Selection of the file's operation – FILE list</i>	5 - 12
<i>Saving files in the instrument's memory – SAVE and SAVE NEXT positions</i>	5 - 12
<i>Controlling the data storing in the instrument's memory – SAVE OPTIONS sub-list</i>	5 - 15
<i>Replacement of the existing files by the new ones – REPLACE position</i>	5 - 15
<i>Controlling of the measurement statistics savings – SAVE STAT. position</i>	5 - 15
<i>Controlling of the measurement results savings – AUTO SAVE position</i>	5 - 15
<i>Loading the files with the measurement results – LOAD position</i>	5 - 16
<i>Removing a file with the measurement results from memory – DELETE position</i>	5 - 17
<i>Removing all files with measurement results from memory – DELETE ALL position</i>	5 - 17
<i>Removing all files with results from buffer's memory – CLEAR BUFFER position</i>	5 - 18

<i>Checking the contents of the memory – CATALOGUE position</i>	5 - 18
<i>Checking the free space in the memory – FREE SPACE position</i>	5 - 18
<i>Operations in buffer</i>	5 - 19
<b>5.4. PRINTING REPORTS</b>	<b>5 - 21</b>
<i>Selection of the options and functions for printing out the results - REPORT list</i>	5 - 21
<i>Edition of the user's text to be added to the reports - TITLE position</i>	5 - 21
<i>Printing of the measurement results - PRINT RESULTS position</i>	5 - 22
<i>Printing of the file's catalogue - PRINT CATALOGUE position</i>	5 - 22
<i>Printing of the statistics of measurement results - PRINT STATISTICS position</i>	5 - 23
<i>Printing of the measurement results from the selected file - PRINT FILE position</i>	5 - 23
<i>Printing of the results from the selected buffer's file - PRINT BUFFER position</i>	5 - 24
<i>Selection of the printing options - OPTIONS sub-list</i>	5 - 25
<i>Selection of the format of the print out - FORMAT position</i>	5 - 25
<i>Controlling the paper ejection after print out - EJECT P. position</i>	5 - 25
<b>APPENDIX A. REMOTE CONTROL</b>	<b>A - 1</b>
<b>INPUT / OUTPUT TRANSMISSION TYPES</b>	A - 1
<b>FUNCTION #1 – INPUT / OUTPUT OF THE CONTROL SETTING CODES</b>	A - 1
<b>FUNCTION #2 – READ OUT OF THE MEASUREMENT RESULTS IN THE SLM MODE</b>	A - 2
<b>FUNCTION #3 – READ OUT OF THE MEASUREMENT RESULTS IN 1/1 OCTAVE         &amp; 1/3 OCTAVE MODE</b>	A - 3
<b>FUNCTION #4 – READ OUT OF THE DATA FILE FROM THE INTERNAL FLASH DISC</b>	A - 3
<i>Control setting codes</i>	A - 4
<b>APPENDIX B. DATA FILE STRUCTURES</b>	<b>B - 1</b>
<b>B.1. GENERAL STRUCTURE OF THE SVAN 94x FILE</b>	B - 1
<b>B.2. STRUCTURE OF THE FILE WITH THE RESULTS FROM THE SLM MODE</b>	B - 6
<b>B.3. STRUCTURE OF THE FILE WITH 1/1 OCTAVE ANALYSIS RESULTS</b>	B - 9
<b>B.4. STRUCTURE OF THE FILE WITH 1/1 OCTAVE ANALYSIS RESULTS</b>	B - 13
<b>B.5. STRUCTURE OF THE FILE CONTAINING RESULTS FROM BUFFER'S FILE</b>	B - 17
<b>APPENDIX C. TECHNICAL DATA OF SVAN 945 INSTRUMENT</b>	<b>C - 1</b>
<b>C.1. SPECIFICATION OF SOUND LEVEL METER</b>	C - 1
<b>C.2. SPECIFICATION OF 1/1 OCTAVE &amp; 1/3 OCTAVE ANALYSER</b>	C - 3
<b>C.3. REMAINING TECHNICAL DATA</b>	C - 6
<b>APPENDIX D. DEFINITIONS AND FILTER CHARACTERISTICS</b>	<b>D - 1</b>
<b>D.1. DEFINITIONS AND FORMULAE</b>	D - 1
<b>D.2. CHARACTERISTICS OF DIGITAL FILTERS IMPLEMENTED IN SVAN 945</b>	D - 3

APPENDIX E. QUICK REFERENCE	E - 1
SETTING THE INSTRUMENT TO MEASUREMENTS	E - 1
CALIBRATION OF THE MEASUREMENT CHANNEL WITH A SOUND CALIBRATOR	E - 3
PREPARING THE INSTRUMENT FOR SOUND MEASUREMENT EXECUTION	E - 4
THE EXECUTION OF THE MEASUREMENTS OF SOUND	E - 7
APPENDIX F. FORMATS OF PRINTED REPORTS	F - 1
PRINTING OF THE CATALOGUE OF THE FILES SAVED IN THE SVAN 945 - PRINT CATALOGUE	F - 1
<i>The exemplary listing of a catalogue of the files in A4 format</i>	F - 2
<i>The exemplary listing of a catalogue of the files in A5 format</i>	F - 2
PRINTING OF THE REPORT FROM THE MEASUREMENTS - PRINT RESULTS	F - 2
<i>The exemplary listing of the report from the SLM measurements in A4 format</i>	F - 2
<i>The exemplary listing of the report from the SLM measurements in A5 format</i>	F - 3
<i>The exemplary listing of the report from 1/1 OCTAVE analysis in A4 format</i>	F - 4
<i>The exemplary listing of the report from 1/1 OCTAVE analysis in A5 format</i>	F - 5
<i>The exemplary listing of the report from 1/3 OCTAVE analysis in A4 format</i>	F - 6
<i>The exemplary listing of the report from 1/3 OCTAVE analysis in A5 format</i>	F - 7
PRINTING OF THE STATISTICS OF THE MEASUREMENTS REPORT - PRINT STATISTICS	F - 8
<i>The exemplary report of the statistics of the measurements in A4 format</i>	F - 9
<i>The exemplary report of the statistics of the measurements in A5 format</i>	F - 10
PRINTING OF THE SELECTED FILE CONTENTS - PRINT FILE	F - 12
<i>The exemplary listing of the file with the measurement results from the SLM in A4 format</i>	F - 12
<i>The exemplary listing of the file with 1/1 OCTAVE analysis results in A4 format</i>	F - 13
<i>The exemplary listing of the file with 1/3 OCTAVE analysis results in A4 format</i>	F - 14
<i>The exemplary listing of the file with 1/1 OCTAVE analysis results in A5 format</i>	F - 15
PRINTING OF THE CONTENTS OF THE SELECTED FILE FROM THE BUFFER - PRINT BUFFER	F - 16
<i>The exemplary report of the buffer's file in A4 format</i>	F - 16
<i>The exemplary report of the buffer's file in A5 format</i>	F - 18
APPENDIX G. UTILISATION OF THE SVAN 945 INSTRUMENT	G - 1
UTILISATION OF THE MEASUREMENT CHANNEL ELEMENTS	G - 1
UTILISATION OF THE INTERNAL BATTERY	G - 2



**Notice:** This user's manual presents the software version named 2.14 (cf. the description of **UNIT LABEL** position of **DISPLAY** list). The succeeding software versions (marked with the bigger numbers) can slightly change the view of some screens presented in the text of the manual.

## INDEX OF LISTS, SUB-LISTS AND POSITIONS

1/1 OCTAVE	<i>Selection of 1/1 OCTAVE analysis, position of FUNCTION sub-list</i>	4 - 16
1/3 OCTAVE	<i>Selection of 1/3 OCTAVE analysis, position of FUNCTION sub-list</i>	4 - 20
3 PROFILES	<i>Measurement results presentation mode (numerical), position of DISPLAY sub-list</i>	5 - 1
AUTO REPEAT	<i>Controlling of the repetition of measurements, position of MEASURE SETUP sub-list</i>	4 - 11
AUTO SAVE	<i>Controlling of measurement results savings, position of SAVE OPTIONS sub-list</i>	5 - 15
BATTERY	<i>Checking the state of the internal battery, position of DISPLAY list</i>	5 - 4
BAUD RATE	<i>Setting the transmission speed of the serial interface, position of RS232 sub-list</i>	5 - 7
BUF. STEP	<i>Setting time between two writings to the buffer's file, position of MEASURE SETUP sub-list</i>	4 - 11
BUFFER	<i>Selection of the SLM result to be saved in the buffer's file, position of PROFILE x sub-list</i>	4 - 12
BUFFER	<i>Selection of 1/1 OCTAVE analysis result to be saved in the buffer's file, position of SPECTRUM sub-list</i>	4 - 18
BUFFER	<i>Selection of 1/3 OCTAVE analysis result to be saved in the buffer's file, position of SPECTRUM sub-list</i>	4 - 22
BUFFER VIEW	<i>Selection of the buffer's file to the screen presentation, sub-list of DISPLAY list</i>	5 - 3
CAL. LEVEL	<i>Setting the level of the calibrator's signal, position of CALIBRATION sub-list</i>	4 - 3
CALIBRATION	<i>Calibration of sound measurement channel, sub-list of FUNCTION list</i>	4 - 3
CATALOGUE	<i>Controlling the contents of the memory, position of FILE list</i>	5 - 18
CLEAR BUFFER	<i>Removing all files with the results from buffer's memory, position of FILE list</i>	5 - 18
CLEAR SETUP	<i>Return to the factory made settings, position of SETUP list</i>	5 - 9
CONTRAST	<i>Setting the contrast of the screen, position of DISPLAY list</i>	5 - 4
DELETE	<i>Removing a file with the results from instrument's memory, position of FILE list</i>	5 - 17
DELETE ALL	<i>Removing all files from instrument's memory, position of FILE list</i>	5 - 17
DETECTOR	<i>Selection of the RMS detector, position of PROFILE x sub-list</i>	4 - 12
DISPLAY	<i>Data available on the screen, main list (function of the push-button)</i>	5 - 1
DISPLAY	<i>Selection of the ways of measurement results presentation, sub-list of DISPLAY list</i>	5 - 1
DISPLAY SCALE	<i>Selection of the scale in graphical results presentations, sub-list of DISPLAY list</i>	5 - 2
ENTER CODE	<i>Access to optional functions</i>	4 - 15
EJECT P.	<i>Controlling the paper ejection after print out, position of OPTIONS sub-list</i>	5 - 25
FILE	<i>Available operations on files, main list (function of the push-button)</i>	5 - 11
FILE NAME	<i>Edition of the file name in which the measurement results has to be saved</i>	5 - 13
FILTER	<i>Selection of the weighting filter in SLM, position of PROFILE x sub-list</i>	4 - 11
FILTER	<i>Selection of the weighting filter in 1/1 OCTAVE analysis, position of SPECTRUM sub-list</i>	4 - 18
FILTER	<i>Selection of the weighting filter in 1/3 OCTAVE analysis, position of SPECTRUM sub-list</i>	4 - 22
FORMAT	<i>Selection of the format of the print out, position of OPTIONS sub-list</i>	5 - 25
FREE SPACE	<i>Checking the free space in the memory, position of FILE list</i>	5 - 18
FUNCTION	<i>Selection of the unit's measurement function, main list (function of the push-button)</i>	2 - 3
FUNCTION	<i>Selection of the available measurement function, sub-list of FUNCTION list</i>	4 - 5
INPUT	<i>Measurement parameters setting, main list (function of the push-button)</i>	4 - 8
INT. TIME	<i>Setting the integration time, position of MEASURE SETUP sub-list</i>	4 - 10
LEQ INTEGRATION	<i>Selection of detector's type in the LEQ calculations, position of SETUP list</i>	5 - 9
LEVEL METER	<i>Selection of SLM function, position of FUNCTION sub-list</i>	4 - 5
LOUDNESS	<i>Selection of the measurement function, position of FUNCTION sub-list</i>	4 - 24
OPTIONS	<i>Selection of the printing options, sub-list of REPORT list</i>	5 - 25
MEASURE SETUP	<i>Selection of measurement parameters, sub-list of INPUT list</i>	4 - 8
MIC. POLAR.	<i>Selection of the voltage polarisation of the microphone, position of SETUP list</i>	5 - 8

MODE	<i>Selection of the triggering mode, position of MEASURE SETUP sub-list</i>	4 - 13
PAUSE	<i>Selection of the working mode of &lt;PAUSE&gt; push-button, position of SHIFT MODE sub-list</i>	5 - 8
PLOT	<i>Measurement results presentation mode (graphical), position of DISPLAY sub-list</i>	5 - 1
PRINT BUFFER	<i>Printing of the results from the selected buffer's file, position of REPORT list</i>	5 - 24
PRINT CATALOGUE	<i>Printing of the file's catalogue, position of REPORT list</i>	5 - 22
PRINT FILE	<i>Printing of the measurement results from the selected file, position of REPORT list</i>	5 - 23
PRINT RESULTS	<i>Printing of the measurement results, position of REPORT list</i>	5 - 22
PRINT STATISTICS	<i>Printing of the statistics of measurement results, position of REPORT list</i>	5 - 23
PROFILE x	<i>Setting parameters in a profile of SLM, sub-list of PROFILES SETUP sub-list</i>	4 - 11
PROFILES SETUP	<i>Setting parameters in profiles and for octave analysis, sub-list of INPUT list</i>	4 - 11
RANGE	<i>Selection of the measurement range in SLM, position of INPUT list</i>	4 - 12
RANGE	<i>Selection of the measurement range in 1/1 OCTAVE analysis, position of INPUT list</i>	4 - 17
RANGE	<i>Selection of the measurement range in 1/3 OCTAVE analysis, position of INPUT list</i>	4 - 21
REP. CYCLE	<i>Setting number of repetition of measurement cycles, position of MEASURE SETUP sub-list</i>	4 - 11
REPLACE	<i>Replacement of the existing files by the new ones, position of SAVE OPTIONS sub-list</i>	5 - 15
REPORT	<i>Printing reports, main list (function of the push-button)</i>	5 - 21
RS232	<i>Setting the parameters of the serial interface, sub-list of SETUP list</i>	5 - 7
RTC	<i>Programming of the instrument's internal Real Time Clock, position of RTC sub-list</i>	5 - 7
SAVE	<i>Saving files in the instrument's memory, position of FILE list</i>	5 - 12
SAVE NEXT	<i>Saving files in the memory with the name's modification, position of FILE list</i>	5 - 12
SAVE OPTIONS	<i>Controlling of the data storing in the instrument's memory, sub-list of FILE list</i>	5 - 15
SAVE STAT.	<i>Controlling of the statistics savings, position of SAVE OPTIONS sub-list</i>	5 - 15
SETUP	<i>Settings of the instrument's parameters, main list (function of the push-button)</i>	5 - 6
SHIFT	<i>Selection of the working mode of &lt;SHIFT&gt; push-button, position of SHIFT MODE sub-list</i>	5 - 8
SHIFT MODE	<i>Selection of few push-button's mode, sub-list of SETUP list</i>	5 - 8
SPECTRUM	<i>Measurement results presentation mode (graphical), position of DISPLAY sub-list</i>	5 - 1
SPECTRUM	<i>Selection of 1/1 OCTAVE analysis parameters, sub-list of PROFILES SETUP sub-list</i>	4 - 18
SPECTRUM	<i>Selection of 1/3 OCTAVE analysis parameters, sub-list of PROFILES SETUP sub-list</i>	4 - 22
START DELAY	<i>Setting start delay before the start of measurement, position of MEASURE SETUP sub-list</i>	4 - 9
STATISTICS	<i>Measurement results presentation mode (graphical), position of DISPLAY sub-list</i>	5 - 1
TIME OUT	<i>Setting time limit for the performance of serial interface operation, position of RS232 sub-list</i>	5 - 7
TIMER	<i>Programming of the instrument's internal timer, position of SETUP list</i>	5 - 6
TITLE	<i>Edition of the user's text to be added to the reports, position of REPORT list</i>	5 - 21
TRG. LEVEL	<i>Selection of the triggering mode, position of TRIGGER SETUP sub-list</i>	4 - 13
TRIGGER	<i>Switching triggering on and off, position of TRIGGER SETUP sub-list</i>	4 - 13
TRIGGER SETUP	<i>Selection of mode and parameters of triggering, sub-list of INPUT list</i>	4 - 13
UNIT LABEL	<i>Checking specification of the instrument, position of DISPLAY list</i>	5 - 5
X-ZOOM	<i>Scaling of the horizontal axis of the graphical presentation, position of DISPLAY SCALE sub-list</i>	5 - 2
Y-SCALE	<i>Scaling of the vertical axis of the graphical presentation, position of DISPLAY SCALE sub-list</i>	5 - 2