



**SVANTEK**

INSTRUMENTATION FOR SOUND & VIBRATION  
MEASUREMENTS AND ANALYSIS


ISO 9001



# SVAN 953

## SOUND LEVEL METER & ANALYSER

### USER'S MANUAL

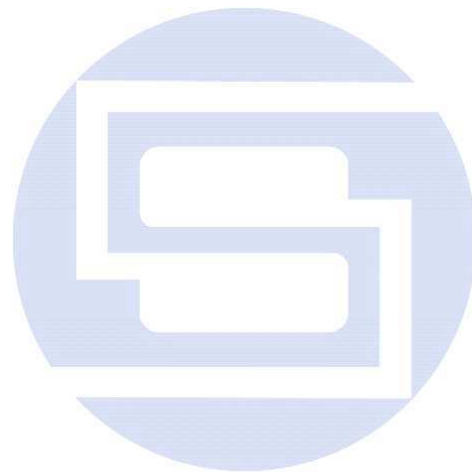

*SVANTEK Sp. z o.o.  
WARSAW, July 2007*



**Notice:** This user's manual presents the software revision named 6.04 / 6.04.1 (cf. the description of the **UNIT LABEL** position of the **DISPLAY** list). The succeeding software revisions (marked with the bigger numbers) can slightly change the view of some displays presented in the text of the manual.

## CONTENTS

<b>1</b>	<b>INTRODUCTION</b>	<b>1-1</b>
<b>2</b>	<b>MANUAL CONTROL OF THE INSTRUMENT</b>	<b>2-1</b>
2.1	Control push-buttons on the front panel	2-1
2.2	Input and output sockets of the instrument	2-6
<b>3</b>	<b>SETTING THE INSTRUMENT</b>	<b>3-1</b>
3.1	Basis of the instrument's control	3-1
3.2	Powering of the instrument	3-18
3.3	Initial setup of the instrument	3-20
3.4	Activation of optional functions	3-24
3.5	Memory organisation	3-25
<b>4</b>	<b>FUNCTIONS OF THE INSTRUMENT - FUNCTION</b>	<b>4-1</b>
4.1	Measurement functions of the instrument - MEASUREMENT FUNCTION	4-1
4.2	Instrument's calibration - CALIBRATION	4-2
4.2.1	Calibration procedure of the instrument - BY MEASUREMENT	4-2
4.2.2	History of the calibration - LAST CALIBRATION	4-4
<b>5</b>	<b>MEASUREMENT PARAMETERS SETTING - INPUT</b>	<b>5-1</b>
5.1	Selection of measurement parameters - MEASUREMENT SETUP	5-1
5.1.1	Setting time delay before the start of measurements - START DELAY	5-2
5.1.2	Setting the integration period - INTEGR. PERIOD	5-2
5.1.3	Setting the number of repetition of measurement cycles - REP. CYCLE	5-4
5.1.4	Logger functionality switching On / Off - LOGGER	5-4
5.1.5	Setting time period between two writings to the logger's file - LOGGER STEP	5-5
5.1.6	Logger file name edition - LOGGER NAME	5-6
5.2	Measurement range info - MEASUREMENT RANGE	5-7
5.3	Setting parameters in a profile - PROFILE x	5-8
5.3.1	Weighting filter selection in a profile - FILTER	5-8
5.3.2	RMS detector selection - DETECTOR	5-9
5.3.3	PEAK result selection for saving in a logger's file - LOGGER PEAK	5-9
5.3.4	MAX result selection for saving in a logger's file - LOGGER MAX	5-9
5.3.5	MIN result selection for saving in a logger's file - LOGGER MIN	5-10
5.3.6	RMS result selection for saving in a logger's file - LOGGER RMS	5-10
5.4	Triggering mode and parameters selection - TRIGGER SETUP	5-10
5.4.1	Trigger parameters setting - MEASURE TRIGGER	5-10
5.4.1.1	Switching the triggering on and off - TRIGGER	5-11
5.4.1.2	Selection of the triggering signal - SOURCE	5-12
5.4.1.3	Setting the level of the triggering signal - LEVEL	5-13
5.4.1.4	Setting the speed of the triggering signal changes - GRADIENT	5-14
5.4.2	Trigger parameters in logger setting - LOGGER TRIGGER	5-14
5.4.2.1	Switching the logger triggering on and off - TRIGGER	5-15
5.4.2.2	Selection of the triggering signal in logger - SOURCE	5-15
5.4.2.3	Setting the level of the triggering signal in the logger - LEVEL	5-15

5.4.2.4	Selection of the number of the results to be saved in the logger before the fulfilment of the triggering condition - PRE	5-16
5.4.2.5	Selection of the number of the results to be saved in the logger after the fulfilment of the triggering condition - POST	5-17
5.5	Selection of dose meter parameters - DOSEMETER SETUP	5-18
5.5.1	Setting criterion sound level - CRITERION LEVEL	5-18
5.5.2	Setting criterion sound level - THRESHOLD LEVEL	5-18
5.5.3	Setting criterion sound level - EXCHANGE RATE	5-19
5.6	Selection of 1/1 octave spectrum parameters - SPECTRUM	5-19
5.6.1	Selecting the weighting filter during 1/1 OCTAVE analysis - FILTER	5-20
5.6.2	1/1 OCTAVE analysis band - BAND	5-20
5.6.3	Logger activation for 1/1 OCTAVE analysis results - LOGGER	5-20
<b>6</b>	<b>DATA AVAILABLE ON THE DISPLAY - DISPLAY</b>	<b>6-1</b>
6.1	Selection of the modes of results presentation - DISPLAY MODES	6-1
6.1.1	Switching on/off spectrum view - SPECTRUM	6-6
6.1.2	Switching on/off three profiles view - 3 PROFILES	6-6
6.1.3	Setting on/off statistics view - STATISTICS	6-8
6.1.4	Setting on/off logger view - LOGGER	6-10
6.1.5	Setting on/off the view of the file description - FILE INFO	6-10
6.2	Setting parameters of graphical presentation modes - DISPLAY SETUP	6-11
6.2.1	Setting the scale of presentation and display's grid - DISPLAY SCALE	6-11
6.2.1.1	Scaling the vertical axis of graphical mode presentation - DYNAMIC	6-11
6.2.1.2	Scaling the horizontal axis of graphical presentation - X-ZOOM	6-12
6.2.1.3	Switching on/off the grid in graphical presentation - GRID	6-12
6.2.2	Setting the parameters of logger files presentation - SPECTRUM VIEW	6-13
6.2.2.1	Selection of graphical presentation type - VIEW	6-13
6.2.2.2	Selection of spectrum type for the presentation - TYPE	6-13
6.2.2.3	Selection of MAX spectrum for the presentation - MAX	6-14
6.2.2.4	Selection of MIN spectrum for the presentation - MIN	6-14
6.2.3	Setting the parameters of logger files presentation - LOGGER VIEW	6-14
6.2.3.1	Selecting the shape of graphical presentation - VIEW	6-15
6.2.3.2	Setting the time to be presented - TIME	6-15
6.3	Selection of logger's file to display presentation - LOGGER VIEW	6-15
6.4	Setting contrast of the display - CONTRAST	6-18
6.5	Setting parameters of the backlight - BACKLIGHT	6-18
6.5.1	Setting brightness of instrument's backlight- BACKLIGHT	6-19
6.5.2	Automatic switch off of the backlight - BACKLIGHT TIMEOUT	6-19
6.6	Checking the state of internal battery - BATTERY	6-19
6.7	Checking specification of the instrument - UNIT LABEL	6-20
<b>7</b>	<b>SAVING THE MEASUREMENT RESULTS - FILE</b>	<b>7-1</b>
7.1	Saving files in the instrument's memory - SAVE and SAVE NEXT	7-3
7.2	Controlling the data storing in the instrument's memory - SAVE OPTIONS	7-10
7.2.1	Saving data starting from the same address - RAM FILE	7-10
7.2.2	Replacement of the existing files by the new ones - REPLACE	7-11
7.2.3	Controlling the measurement statistics savings - SAVE STATISTICS	7-12

7.2.4	Controlling the measurement results savings - AUTO SAVE	7-12
7.2.5	Direct access to the SAVE / SAVE NEXT function - DIRECT SAVE	7-15
7.3	Loading the files with the measurement results - LOAD	7-16
7.4	Removing a file with the measurement results from memory - DELETE	7-19
7.4.1	Deleting files with the main results - RESULT FILES	7-19
7.4.2	Deleting logger files - LOGGER FILES	7-21
7.4.3	Deleting files with setup settings - SETUP FILES	7-23
7.5	Removing all files with measurement results from memory - DELETE ALL	7-25
7.5.1	Deleting all result files - RESULT FILES	7-25
7.5.2	Deleting all logger files - LOGGER FILES	7-26
7.5.3	Deleting all setup files - SETUP FILES	7-27
7.6	Merging file space - DEFRAGMENTATION	7-28
7.6.1	Merging result and setup files memory - FILES DEFRAGMENT.	7-29
7.6.2	Merging logger files memory - LOGGER DEFRAGMENT.	7-30
7.7	Checking the contents of the memory - CATALOGUE	7-32
7.8	Checking the free space in the memory - FREE SPACE	7-33
7.9	Saving setup files in the instrument's memory - SAVE SETUP	7-34
7.10	Loading the files with the setup settings - LOAD SETUP	7-38
7.11	Connecting the external USB memory stick- DIRECTORY	7-39
7.12	Copying files to the external USB memory stick - COPY FILES TO USB	7-40
7.13	Moving files to the USB memory stick- MOVE FILES TO USB	7-41
<b>8</b>	<b>PRINTING REPORTS - REPORT</b>	<b>8-1</b>
8.1	Edition of the user's text to be added to the reports - TITLE	8-2
8.2	Printing of the measurement results - PRINT RESULTS	8-3
8.3	Printing of the statistics of measurement results - PRINT STATISTICS	8-8
8.4	Printing of the file's catalogue - PRINT CATALOGUE	8-13
8.5	Selection of the printing options - OPTIONS	8-15
8.5.1	Selection of the format of the print out - FORMAT	8-15
8.5.2	Controlling the paper ejection after print out - EJECT P.	8-15
<b>9</b>	<b>SETUP MENU - SETUP</b>	<b>9-1</b>
9.1	Setting the language of the user interface - LANGUAGE	9-2
9.2	Return to the factory settings - CLEAR SETUP	9-3
9.3	Day time limits selection - DAY TIME LIMITS	9-4
9.4	Exposure time setting - EXPOSURE TIME	9-4
9.5	Available parameters of the Ext. I/O port selection - EXTERNAL I/O SETUP	9-5
9.5.1	Mode selection of the Ext. I/O port - MODE	9-5
9.5.2	Digital output function selection of the Ext. I/O socket - FUNCTION	9-6
9.5.3	Polarisation selection of the digital output signal - POLARISATION	9-6
9.5.4	Active level selection of the digital output signal - ACTIVE LEVEL	9-6
9.5.5	Source signal selection for the alarm pulse generation - SOURCE	9-7
9.5.6	Alarm level selection on the digital output of Ext. I/O - ALARM LEVEL	9-7

9.6	Selection of the microphone parameters - MICROPHONE	9-8
9.6.1	Switching on or off the compensation filter - COMPENSATION	9-8
9.6.2	Switching on or off the outdoor filter - OUTDOOR FILTER	9-8
9.6.3	Selection the type of the outdoor filter - FILTER TYPE	9-9
9.7	Detector's type selection in the LEQ calculations - RMS INTEGRATION	9-9
9.8	Setting the parameters of the serial interface - RS232	9-10
9.8.1	Setting the transmission speed of the serial interface - BAUD RATE	9-10
9.8.2	Setting time limit for the performance of serial interface operation - TIME OUT	9-10
9.9	Programming the instrument's internal Real Time Clock - RTC	9-11
9.10	Selection of few push-buttons mode - SHIFT MODE	9-12
9.10.1	<SHIFT> push-button working mode selection - SHIFT	9-12
9.10.2	<START / STOP> push-button working mode selection - ST/SP	9-12
9.11	Setting ten statistical levels - STATISTICAL LEVELS	9-13
9.12	Programming the instrument's internal timer - TIMER	9-13
9.12.1	Selecting the mode of the timer function - MODE	9-14
9.12.2	Setting day of the instrument's switch on - START DAY	9-14
9.12.3	Setting hour of the instrument's switch on - START HOUR	9-14
9.12.4	Selecting the mode of the timer function - REPETITION	9-15
9.12.5	Description of the exemplary timer function execution	9-15
9.13	Selection the USB-HOST port functionality - USB-HOST PORT	9-16
9.14	Warnings selection - WARNINGS	9-19
9.14.1	Saving the measurement results in a file - RESULTS NOT SAVED	9-19
9.14.2	Checking free space on the USB disk - USB DISK FREE SP.	9-20
9.14.3	Minimum USB disk memory free space setting - MIN FREE SPACE	9-20
<b>10</b>	<b>1/1 OCTAVE ANALYSER</b>	<b>10-1</b>
10.1	Selection of 1/1 OCTAVE analysis mode	10-1
10.2	Selection of parameters of 1/1 OCTAVE analysis	10-2
10.2.1	Measurement range selection in 1/1 OCTAVE analysis - MEASUREMENT RANGE	10-2
10.2.2	Weighting filter selection in 1/1 OCTAVE analysis - FILTER	10-3
10.2.3	The 1/1 OCTAVE analysis band - BAND	10-3
10.2.4	Activation of saving results of the 1/1 OCTAVE analysis in the logger's file - LOGGER	10-3
10.2.5	Selection of the result which triggers registration in logger in 1/1 OCTAVE analysis - LOGGER TRIGGER	10-4
10.3	Display options in 1/1 OCTAVE analysis mode	10-4
10.3.1	One-profile presentation mode in 1/1 OCTAVE analysis	10-5
10.3.2	Presentation of 1/1 OCTAVE analysis results - SPECTRUM	10-5
10.3.3	Three-profiles presentation mode in 1/1 OCTAVE analysis - 3 PROFILES	10-5
10.3.4	Statistical presentation mode in 1/1 OCTAVE analysis - STATISTICS	10-6
10.3.5	Time history plot - LOGGER	10-8
10.3.6	Basic data of the saved files - FILE INFO	10-8
10.3.7	Scaling the vertical axis of graphical presentation - DYNAMIC	10-8
10.3.8	Scaling the horizontal axis of graphical presentation - X-ZOOM	10-9
10.3.9	Switching on/off the grid in the graphical presentation - GRID	10-10

10.3.10 View selection in 1/1 OCTAVE analysis - VIEW	10-10
10.3.11 Selection of the spectrum type for presentation - TYPE	10-11
10.3.12 Presentation of logged 1/1 OCTAVE spectra - LOGGER VIEW	10-12
<b>A. REMOTE CONTROL</b>	<b>A-1</b>
A.1. Input / Output transmission types	A-1
A.2. Function #1 - Input / Output of the control setting codes	A-1
A.3. Function #2 - measurement results read-out in the SLM mode	A-3
A.4. Function #3 - read-out of the measurement results in 1/1 OCTAVE mode	A-5
A.5. Function #4 - read-out of the data file from the internal flash-disc	A-6
A.6. Function #5 - statistical analysis results read-out	A-7
A.7. Function #7 - special control functions	A-8
A.8. Function #9 - write-in the data file into the internal flash-disc	A-11
A.9. Control setting codes	A-12
<b>B. DATA FILE STRUCTURES</b>	<b>B-1</b>
B.1. General structure of the SVAN 953 file	B-1
B.2. Structure of the file containing results from logger's file	B-12
B.2.1. The contents of the files in the logger	B-12
B.2.1.1. Record with the results	B-12
B.2.1.2. Record with the state of the markers	B-13
B.2.1.3. Record with the breaks in the results registration	B-13
B.3. Structure of the file with the results from the SLM and DOSE METER modes	B-13
B.6. Structure of the file with 1/1 OCTAVE analysis results	B-14
<b>C. TECHNICAL SPECIFICATION</b>	<b>C-1</b>
C.1. Sound Level Meter specification	C-1
C.2. Specification of SVAN 953 as 1/1 OCTAVE and FFT sound analyser	C-21
C.3. Miscellaneous specification of SVAN 953	C-25
<b>D. DEFINITIONS AND FILTER CHARACTERISTICS</b>	<b>D-1</b>
D.1. Definitions and formulae	D-1
D.1.1. Basic symbols and notation	D-1
D.1.2. Definitions of the values, functions and results measured in SLM mode	D-2
PEAK value	D-2
SPL function	D-2
MAX result	D-2
MIN result	D-3
LEQ function	D-3
RMS result	D-3
SEL result	D-4
Ltm3 and Ltm5 results	D-4
Ld, Le, Ln, Lde, Len, Lnd and Lden results	D-4
LEPd result	D-5
OVL result	D-5
Lnn statistical Levels	D-5
D.1.3. Definitions of the results measured in DOSE METER mode	D-8

DOSE result	D-8
D_8h result	D-8
LAV result	D-8
TLAV result	D-8
SEL8 result	D-8
PSEL result	D-9
E result	D-9
E_8h result	D-9
D.2. Frequency characteristics of the implemented digital filters	D-10
D.2.1. Weighting filters in the SLM mode	D-10
D.2.2. Outdoor filters	D-13
D.2.3. Digital 1/1 OCTAVE filters implemented in the SVAN 953	D-14

**LIST OF FIGURES**

SVAN 953 instrument with the preamplifier and the microphone	1-2
Control push-buttons of the SVAN 953 instrument	2-1
Display with the “MARKERS” (after pressing <ALT> and <SHIFT> together)	2-4
Displays with the activated markers	2-4
Time history plot with the indication of the active markers	2-5
Top cover of the SVAN 953 instrument in 1:1 scale	2-6
Bottom cover of the SVAN 953 instrument in 1:1 scale	2-6
Front panel of the SVAN 953 instrument in 1:1 scale	2-7
Rear panel of the SVAN 953 instrument in 1:1 scale	2-8
Highlighted elements of the main list	3-1
RECENT ITEMS windows (after double pressing of <MENU> push-button)	3-1
Main list (a) and the elements of INPUT list (b)	3-2
MEASUREMENT SETUP window ( <i>path: MENU / INPUT / MEASUREMENT SETUP</i> )	3-2
MEASUREMENT SETUP window; the INTEGR. PERIOD position accessible	3-2
INTEGRATION PERIOD position after pressing the <<< or >>> push-buttons, respectively	3-2
Displays after three consecutive pressing of <ESC> push-button from MEASUR. SETUP sub-list	3-2
Displays during and after the accessing FREE SPACE window ( <i>path: MENU / FILE / FREE SPACE</i> )	3-3
Edition of text to be printed as a header in the measurement reports ( <i>path: MENU / REPORT / TITLE</i> )	3-3
Displays in case of paused measurement	3-3
Control diagram of the FUNCTION list	3-4
Control diagram of the INPUT list in the DOSE METER mode	3-6
Control diagram of the INPUT list in 1/1 OCTAVE mode	3-6
Control diagram of the INPUT list in the LEVEL METER mode	3-7
Control diagram of the DISPLAY list	3-9
Control diagram of the FILE list	3-13
Control diagram of the REPORT list	3-14
Control diagram of the SETUP list	3-17
BATTERY windows with different sources powering the instrument: SA 15 external DC power adapter (a), SA 17A external battery pack (b), internal batteries (c) and USB power (d)	3-18
Displays with “Battery” icon (a) and with BATTERY window ( <i>path: MENU / DISPLAY / BATTERY</i> ) (b)	3-18
Displays with “Computer” icon (a) and with BATTERY window (b)	3-18
BACKLIGHT windows with BACKLIGHT TIMEOUT active (a), and not active (b)	3-19
Displays after switching on the instrument	3-20
Display in one profile (a) and 3 PROFILES display mode (b) with the SLM measurement results	3-20
Display in one profile (a) and 3 PROFILES mode (b) with the measurement results not from the SLM	3-21
Display with all available icons	3-21
Display with “Paper sheet” icon	3-21
Display with “Battery” icon	3-21
Display with “Computer” icons	3-21
Display with “Antenna” (“Tree”) icon	3-22
Display with “Loudspeaker” icon	3-22

Display with “Headphone” icon .....	3-22
Display with “Envelope” icon .....	3-22
Display with “Bell” icon .....	3-22
Display with “Timer” icon .....	3-23
Display with “Arrows” icon .....	3-23
FUNCTION list opened with MEASUR. FUNCTION selected (a) and MEASUR. FUNCTION windows with LEVEL METER (b) 1/1 OCTAVE (c) and DOSE METER selected (d) .....	3-24
Displays during the entering of the access code to a function .....	3-24
Displays after unsuccessful verification of the access code .....	3-24
Scheme of the instrument’s memory organisation without the USB–HOST .....	3-25
Scheme of the instrument’s memory organisation with the USB–HOST and memory stick connected .....	3-26
Main list with FUNCTION text selected (a) and FUNCTION list opened with MEASUREMENT FUNCTION selected (b) .....	4-1
MEASUREMENT FUNCTION window opened with LEVEL METER text selected (a), 1/1 OCTAVE text selected (b), DOSE METER text selected (c) and the activation of optional functions (d) .....	4-1
Main list with FUNCTION text selected (a), FUNCTION list opened with CALIBRATION text selected (b) ..	4-2
CALIBRATION list with BY MEASUREMENT text selected (a) BY MEASUREMENT window opened (b) ..	4-2
Displays during the calibration measurement .....	4-3
Displays after the measurements (a) and after the acceptance of the value of the calibration factor (b) .....	4-3
CALIBRATION list with LAST CALIBRATION text selected (a) LAST CALIBRATION window opened with ten calibration records (b) .....	4-4
Displays with the LAST CALIBRATION records .....	4-4
Empty LAST CALIBRATION window .....	4-4
Main list with the INPUT text selected .....	5-1
INPUT list in the LEVEL METER (a) 1/1 OCTAVE (b) and DOSE METER (c) .....	5-1
Displays with not active sub-lists of INPUT list .....	5-1
MEASUREMENT SETUP windows .....	5-2
MEASUREMENT SETUP windows; the setting of START DELAY with 1-second step .....	5-2
MEASUREMENT SETUP windows; the setting of START DELAY with 10-seconds step .....	5-2
MEASUREMENT SETUP windows; INTEGR. PERIOD setting with 1-second step .....	5-3
MEASUREMENT SETUP windows; INTEGR. PERIOD setting with 10-seconds step .....	5-3
MEASUREMENT SETUP windows; INTEGR. PERIOD setting with 1 and 10-minutes step .....	5-3
MEASUREMENT SETUP windows; INTEGR. PERIOD setting with 10-hours step .....	5-3
Displays during setting the predefined INTEGR. PERIOD sequence .....	5-3
Display, when the INT.PERIOD is too short for AUTO SAVE option .....	5-4
MEASUREMENT SETUP windows; REP. CYCLE setting with the step equal to one .....	5-4
MEASUREMENT SETUP windows; REP. CYCLE setting with the step equal to 20 .....	5-4
Displays with the LOGGER deactivated and activated .....	5-5
Displays during the activation of LOGGER functionality .....	5-5
LOGGER STEP setting; available values in a sequence 1, 2, 5 .....	5-5
LOGGER STEP setting; available values from 1 second to 1 hour .....	5-5
LOGGER NAME edition in MEASUREMENT SETUP .....	5-6
Displays during the attempt of overwriting the existing file .....	5-6
Relations between INTEGR. PERIOD and LOGGER STEP .....	5-7
INPUT list with the MEASUREMENT RANGE selected (a) and opened (b) .....	5-7
MEASUREMENT RANGE selection in 1/1 OCTAVE analyser .....	5-7
View of the displays when the level of the signal is too low .....	5-8
INPUT windows; PROFILE 1, PROFILE 2 and PROFILE 3 selected .....	5-8
PROFILE(x) windows; the selection of the weighting filter .....	5-8
PROFILE(x) windows; the selection of the RMS detector .....	5-9
PROFILE(x) windows; the PEAK result to be not saved or saved in a logger’s file .....	5-9
PROFILE(x) windows; the MAX result to be not saved or saved in a logger’s file .....	5-9
PROFILE(x) windows; the MIN result to be not saved or saved in a logger’s file .....	5-10
PROFILE(x) windows; the RMS result to be not saved or saved in a logger’s file .....	5-10
TRIGGER SETUP selected in the INPUT list and the TRIGGER SETUP sub-list .....	5-10
Displays in the MEASURE TRIGGER window .....	5-11
MEASURE TRIGGER window .....	5-11
Displays during the measurements while the triggering condition is not fulfilled .....	5-11
MEASURE TRIGGER windows with SLOPE modes selected .....	5-11

MEASURE TRIGGER windows with LEVEL modes selected .....	5-12
MEASURE TRIGGER window with GRAD + mode selected.....	5-12
MEASURE TRIGGER windows with not active SOURCE signal line.....	5-12
MEASURE TRIGGER window with SOURCE signal selection .....	5-12
MEASURE TRIGGER window with LEVEL selection in SLOPE + mode.....	5-13
MEASURE TRIGGER window with LEVEL selection in SLOPE – mode (10-dB step down) .....	5-13
MEASURE TRIGGER window with LEVEL selection in LEVEL + mode (1-dB step up) .....	5-13
MEASURE TRIGGER window with LEVEL selection in LEVEL – mode (1-dB step up).....	5-13
MEASURE TRIGGER window with LEVEL selection in GRAD + mode (1-dB step down) .....	5-13
MEASURE TRIGGER window with GRADIENT selection (1-dB/ms and 10-dB/ms step up) .....	5-14
MEASURE TRIGGER window with GRADIENT selection (10-dB/ms up and 1-dB/ms down).....	5-14
TRIGGER SETUP window; LOGGER TRIGGER selection.....	5-14
LOGGER TRIGGER windows.....	5-15
LOGGER TRIGGER windows with not active SOURCE signal line .....	5-15
LOGGER TRIGGER window with SOURCE selection in 1/1 OCTAVE mode.....	5-15
LOGGER TRIGGER window with LEVEL selection (1-dB step up).....	5-16
LOGGER TRIGGER window with LEVEL selection (10-dB step up).....	5-16
LOGGER TRIGGER windows with PRE selection .....	5-16
LOGGER TRIGGER windows with PRE selection for different LOGGER STEPS.....	5-17
LOGGER TRIGGER windows with POST selection.....	5-17
LOGGER TRIGGER windows with POST selection for different LOGGER STEP .....	5-17
DOSEMETER SETUP selected in INPUT list and the DOSEMETER SETUP window.....	5-18
DOSEMETER SETUP windows with CRITERION LEVEL selection .....	5-18
DOSEMETER SETUP windows with THRESHOLD LEVEL selection .....	5-19
DOSEMETER SETUP windows with EXCHANGE RATE selection.....	5-19
SPECTRUM selected in INPUT list and SPECTRUM window opened.....	5-19
SPECTRUM windows with FILTER selection.....	5-20
SPECTRUM windows with LOGGER activation .....	5-20
Main list with DISPLAY text highlighted (displayed inversely) .....	6-1
DISPLAY windows .....	6-1
Measurement results in LEVEL METER made with linear integration, presented in one profile mode .....	6-2
Measurement results in LEVEL METER made with exponential integration, presented in one profile mode .....	6-2
Displays with the names of saved files in the bottom line.....	6-3
Statistical levels calculated with linear integration presented in one profile mode .....	6-3
Statistical levels calculated with exponential integration presented in one profile mode .....	6-3
Measurement results in LEVEL METER and unknown profile presented with the biggest available fonts .....	6-4
Displays during the measurement performed in LEVEL METER mode with the active LOGGER.....	6-4
Displays after the end of the measurements with the file's name the data are saved-in .....	6-5
Measurement results in DOSE METER made with exponential integration, presented in one profile mode .....	6-5
DISPLAY MODES windows with SPECTRUM position accessible.....	6-6
Displays in SPECTRUM mode for 1/1 OCTAVE analysis .....	6-6
Setting on and off the accessibility of three profiles presentation mode .....	6-6
Measurement results in 3 PROFILES mode .....	6-7
Results in 3 PROFILES mode with selection of the result in a profile .....	6-7
Results in 3 PROFILES mode with selection of the profile.....	6-7
Statistical levels calculated with linear integration presented in 3 PROFILES mode .....	6-7
Displays during the measurements performed in LEVEL METER mode with the active LOGGER .....	6-8
Displays during the measurements performed in LEVEL METER mode with the active LOGGER (the first three) and after saving the results (the last one).....	6-8
Setting on (a) and off (b) the accessibility of statistics presentation mode .....	6-8
Results presented in the statistics presentation mode.....	6-9
Instrument's default Lxx statistical levels presented in graphical form .....	6-9
Results presented in both statistic presentation modes .....	6-9
Results presented in both statistic presentation modes during the measurements .....	6-9
Setting on and off the possibility of presentation the results saved in the logger.....	6-10
Different presentation modes of the results stored in logger.....	6-10
Setting on and off the logger's file description presentation mode .....	6-10
Exemplary contents of FILE INFO window .....	6-10
DISPLAY window with DISPLAY SETUP selected .....	6-11

DISPLAY SETUP windows in LEVEL METER and 1/1 OCTAVE with DISPLAY SCALE text highlighted	6-11
DISPLAY SCALE windows with the possible values of DYNAMIC parameter .....	6-11
DISPLAY SCALE windows with the selection of DYNAMIC parameter in 1/OCTAVE mode.....	6-11
Displays with the results stored in logger presented with different DYNAMIC parameter .....	6-12
1/1 OCTAVE analysis results presented with different value of X-ZOOM selected in DISPLAY SCALE .....	6-12
1/1 OCTAVE analysis with 3x, 4x, 5x and 6x X-ZOOM.....	6-12
DISPLAY SCALE windows with the grid switched on and off.....	6-12
Displays with the grid switched on (a) and off (b) .....	6-13
DISPLAY SETUP window with SPECTRUM VIEW text highlighted.....	6-13
SPECTRUM VIEW windows with VIEW selection.....	6-13
SPECTRUM VIEW windows with TYPE selection.....	6-14
SPECTRUM VIEW windows with MAX spectrum selection .....	6-14
SPECTRUM VIEW windows with MIN spectrum selection.....	6-14
DISPLAY SETUP windows in LEVEL METER and 1/1 OCTAVE with LOGGER VIEW text highlighted ..	6-14
LOGGER VIEW windows with available values of VIEW parameter .....	6-15
Presentation of displays with different VIEW parameter: NORMAL (a), FULL (b) and EXTENDED (c).....	6-15
Displays with the possible values of TIME parameter .....	6-15
Displays with the possible values of TIME parameter.....	6-15
DISPLAY window with LOGGER VIEW text highlighted.....	6-16
LOGGER VIEW windows with the selection of the file to be seen.....	6-16
LOGGER VIEW sub-list with the scrolling of the file to be seen.....	6-16
LOGGER VIEW window in the case when the files do not exist .....	6-16
Displays with the selected logger's file; the change of the cursor position .....	6-17
Displays with the selected logger's file; the scrolling to the right.....	6-17
Displays with the selected logger's file; the scrolling to the left.....	6-17
Displays with the selected logger's file; the change of the axis relation .....	6-17
Displays with the selected logger's file; the change of the profile .....	6-17
Displays with the selected logger's file; the change of the result from a profile (PEAK, MAX, MIN, RMS) ...	6-18
DISPLAY window with CONTRAST text highlighted.....	6-18
CONTRAST windows with the change of the contrast.....	6-18
DISPLAY window with BACKLIGHT text highlighted.....	6-18
BACKLIGHT windows with the setting of the backlight's brightness .....	6-19
BACKLIGHT windows with BACKLIGHT TIMEOUT active (a), and not active (b).....	6-19
DISPLAY window with BATTERY text highlighted .....	6-19
BATTERY windows for different sources powering the instrument .....	6-20
DISPLAY window with UNIT LABEL text highlighted .....	6-20
UNIT LABEL windows opened and scrolled with the <▲>, <▼> push-buttons.....	6-20
Main list; the FILE text highlighted (displayed inversely).....	7-2
FILE list of the instrument .....	7-3
SAVE window in the FILE list.....	7-3
Display during the process of setting the character in the edited name .....	7-3
Display during the selection of the character's position to be edited .....	7-4
Display during the selection of the character .....	7-4
Displays in the FILE NAME edition after pressing the <SHIFT> and <▶> push-buttons .....	7-4
Displays in the FILE NAME edition after pressing the <SHIFT> and <◀> push-buttons .....	7-4
Displays during the attempt of overwriting the existing file, changing the name and saving data .....	7-5
Displays in the simplified edition of the file name and saving operation execution.....	7-5
Displays in the simplified edition of the file name, saving and the "saturation" of that operation.....	7-5
Displays after the attempt to perform unavailable saving operation and the return to the SAVE NEXT .....	7-6
Display after the SAVE operation when there were no results for storing .....	7-6
Displays during and after the execution of the SAVE operation.....	7-6
Displays after the attempt to overwrite a file if the REPLACE is not active.....	7-6
Settings and the FILE INFO after the performed measurements.....	7-7
FREE SPACE window before and after saving the @EXAMP1 file.....	7-7
Settings and the FILE INFO after the performed measurements.....	7-7
FREE SPACE window before and after saving the @EXAMP2 file.....	7-8
Settings before the execution of the measurements.....	7-8
Settings for the current measurements.....	7-8
FILE INFO during and after the measurements .....	7-8

FREE SPACE window before and after saving the @EXAMP3 and &LOG96 files .....	7-9
Settings before the execution of the measurements.....	7-9
Settings and the FILE INFO during and after the measurements.....	7-9
FREE SPACE window before and after saving the @EXAMP4 and &LOG97 files .....	7-9
CATALOGUE window with the files described in the examples.....	7-10
FILE list with the SAVE OPTIONS text highlighted (displayed inversely).....	7-10
SAVE OPTIONS sub-list; the selection of the RAM FILE in LEVEL METER .....	7-10
SAVE OPTIONS sub-list; the selection of the REPLACE in LEVEL METER and 1/1 OCTAVE analyser.....	7-11
SAVE OPTIONS sub-list; the selection of the REPLACE in DOSE METER.....	7-11
Displays during the file saving when the REPLACE is switched off and on.....	7-11
SAVE OPTIONS sub-list; the selection of the SAVE STATISTICS in LEVEL METER and in 1/1 OCTAVE analysis mode .....	7-12
SAVE OPTIONS sub-list; the selection of the SAVE STATISTICS in DOSE METER .....	7-12
SAVE OPTIONS sub-list; the selection of the AUTO SAVE in LEVEL METER and in 1/1 OCTAVE modes.....	7-12
SAVE OPTIONS sub-list; the selection of the AUTO SAVE in DOSE METER .....	7-13
Displays during the execution of the AUTO SAVE switching on; the FILE NAME skipping and return to the SAVE OPTION sub-list .....	7-13
Display after attempt of setting AUTO SAVE option with too short INT. PERIOD.....	7-13
Displays during the execution of the AUTO SAVE switching on; the FILE NAME confirmation and return to the FILE list.....	7-13
Displays after the incorrect file name edition .....	7-14
Measurement results presented after pressing the <▲> or <▼> push-buttons.....	7-14
Results saved from a profile presented after pressing the <<◀> or <▶> and <ALT> push-buttons .....	7-14
Results saved from a profile presented after pressing the <<◀> or <▶> and <ALT> push-buttons .....	7-15
SAVE OPTIONS sub-list; the selection of the DIRECT SAVE in LEVEL METER.....	7-15
SAVE OPTIONS sub-list; the selection of the DIRECT SAVE in DOSE METER.....	7-15
Exemplary executions of the software with the DIRECT SAVE not active .....	7-16
Exemplary executions of the software with the DIRECT SAVE active.....	7-16
FILE list with the LOAD text highlighted (displayed inversely) .....	7-16
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-16
Display during the execution of the LOAD operation .....	7-17
Exemplary contents of the LOAD window .....	7-17
Exemplary result files associated with the same logger file (&LOG33).....	7-17
Display during the execution of the loading function .....	7-18
Displays after the execution of the LOAD operation.....	7-18
Exemplary displays during the loading and checking the contents of a DOSE METER file.....	7-18
Exemplary displays during a LEVEL METER file loading.....	7-18
Exemplary displays during contents checking of a LEVEL METER file.....	7-18
FILE list with the DELETE text highlighted (displayed inversely).....	7-19
RESULT FILES selected to be deleted and the flash memory does not contain any file .....	7-19
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-19
Selection of the RESULT FILES to be deleted .....	7-20
Execution of the RESULT FILES deletion.....	7-20
Execution of the file deletion and the influence of this process on the memory space .....	7-21
Execution of the @EXAMP3 file deletion and the influence of this process on the memory space.....	7-21
LOGGER FILES selected to be deleted and the memory does not contain any file .....	7-21
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-21
Selection of the LOGGER FILES to be deleted .....	7-22
Execution of the LOGGER FILES deletion.....	7-22
Execution of the &LOG8 file erasing from the logger memory.....	7-22
Increase of the LOGGER AVAILABLE memory after deletion a file from logger memory.....	7-23
Execution of the &LOG17 file deletion and the influence of this process on the memory space .....	7-23
SETUP FILES selected to be deleted and the instrument's memory does not contain any file .....	7-23
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-23
Selection of the SETUP FILES to be deleted .....	7-24
Execution of the RESULT FILES deletion.....	7-24
Execution of the @SET7 file deletion .....	7-24
Influence of the execution of the @SET3 file deletion on the memory space .....	7-24
Execution of the @SET4 file deletion and the influence of this process on the memory space.....	7-25

DELETE ALL text highlighted (displayed inversely) in the FILE list .....	7-25
RESULT FILES selected to the execution of the DELETE ALL operation .....	7-25
Display after the attempt to perform an unavailable operation during measurement in progress .....	7-25
Displays with the confirmation window during the execution of the DELETE ALL operation .....	7-26
Execution of the DELETE ALL operation in the case of RESULT FILES selection .....	7-26
LOGGER FILES selected to the execution of the DELETE ALL operation .....	7-26
Display after the attempt to perform an unavailable operation during measurement in progress .....	7-26
Displays with the confirmation window during the execution of the DELETE ALL operation .....	7-27
Execution of the DELETE ALL operation in the case of LOGGER FILES selected .....	7-27
SETUP FILES selected to the execution of the DELETE ALL operation .....	7-27
Display after the attempt to perform an unavailable operation during measurement in progress .....	7-27
Displays with the confirmation window during the execution of the DELETE ALL operation .....	7-28
Execution of the DELETE ALL operation in the case of SETUP FILES selection .....	7-28
Execution of the DELETE ALL operation for all type files simultaneously .....	7-28
DEFRAGMENTATION text highlighted (displayed inversely) in the FILE list .....	7-29
FILES DEFRAGMENT. selected to the execution of the DEFRAGMENTATION operation .....	7-29
Confirmation windows during the execution of the FILES DEFRAGMENTATION operation .....	7-29
Display after the attempt to perform an unavailable operation during measurement in progress .....	7-29
Message in the case when the execution of the DEFRAGMENTATION operation is unnecessary .....	7-30
Execution of the DEFRAGMENTATION operation .....	7-30
Result of the FILES DEFRAGMENTATION operation .....	7-30
LOGGER DEFRAGMENT. selected to the execution of the DEFRAGMENTATION operation .....	7-30
Confirmation windows during the execution of the LOGGER DEFRAGMENTATION operation .....	7-31
Display after the attempt to perform an unavailable operation during measurement in progress .....	7-31
Message in the case when the execution of the DEFRAGMENTATION operation is unnecessary .....	7-31
Execution of the DEFRAGMENTATION operation .....	7-31
Result of the LOGGER DEFRAGMENTATION operation .....	7-32
CATALOGUE text highlighted (displayed inversely) in the FILE list .....	7-32
CATALOGUE window when the memory is empty .....	7-32
Contents of the CATALOGUE window .....	7-33
Exemplary result files associated with the same logger file (&LOG52) in the CATALOGUE window .....	7-33
FREE SPACE text highlighted (displayed inversely) in the FILE list .....	7-33
FREE SPACE window after the execution of the DELETE ALL operation .....	7-34
FREE SPACE window with the number depending on the measurements and operations performed .....	7-34
SAVE SETUP text highlighted (displayed inversely) in the FILE list .....	7-34
SAVE SETUP window in the FILE list .....	7-35
Display during the process of setting the character in the edited name .....	7-35
Display during the selection of the character's position to be edited .....	7-35
Display during the selection of the character .....	7-35
Displays in the FILE NAME edition after pressing the <SHIFT> and <>> push-buttons .....	7-36
Displays in the FILE NAME edition after pressing the <SHIFT> and <<< push-buttons .....	7-36
Displays during the attempt of overwriting the existing file, changing the name and saving data .....	7-36
Displays in the simplified edition of the setup file name and saving operation execution .....	7-36
Displays in the simplified edition of the file name, saving and the "saturation" of that operation .....	7-37
Displays after the attempt to perform unavailable saving operation; the return to the SAVE SETUP .....	7-37
Displays during and after the execution of the SAVE operation .....	7-37
Displays after the attempt to overwrite a file if the REPLACE is active .....	7-38
FILE list with the LOAD SETUP text highlighted (displayed inversely) .....	7-38
Display after the attempt to perform an unavailable operation during measurement in progress .....	7-38
Display during the execution of the LOAD SETUP operation .....	7-38
Exemplary contents of the LOAD SETUP window .....	7-39
Displays after the execution of the LOAD SETUP operation .....	7-39
FILE list with the DIRECTORY text selected (a) and the DIRECTORY window opened (b) .....	7-39
FILE list, the DIRECTORY window .....	7-40
FILE list with the COPY FILES TO USB text selected (a) and the COPY FILES window opened (b) .....	7-40
RESULT FILES selection to the execution of the COPY FILES TO USB operation (a); the RESULT, LOGGER and SETUP files selected to the execution of the COPY FILES TO USB operation (b) .....	7-40
Display after the attempt to perform an unavailable operation during measurement in progress .....	7-41
Display after the execution of COPY FILES TO USB operation (a) and when the file exists already (b) .....	7-41

FILE list with the MOVE FILES TO USB text selected (a) and the MOVE FILES window opened (b) .....	7-41
RESULT FILES selection to the execution of the MOVE FILES TO USB operation (a) the RESULT, LOGGER and SETUP files selected to the execution of the MOVE FILES TO USB operation (b) .....	7-41
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-42
Display after the execution of MOVE FILES TO USB operation (a) and when the file already exists in the USB memory (b) .....	7-42
Main list; the REPORT text highlighted (displayed inversely).....	8-1
SETUP list with the USB-HOST PORT selected and this window with the activated RS232 .....	8-1
SETUP list with the RS232 selected and the exemplary contents of this window .....	8-1
REPORT list.....	8-2
REPORT list with the TITLE selected .....	8-2
Displays in the text edition of the report's header .....	8-3
Displays with all available characters.....	8-3
REPORT list with the PRINT RESULT selected .....	8-3
Display after the attempt to perform an unavailable operation during measurement in progress.....	8-3
Display in the REPORT list, the execution of the PRINT RESULTS .....	8-4
Example of the printed results - A5 format.....	8-5
Example of the printed results from the LEVEL METER mode - A4 format.....	8-5
Example of the printed results from the 1/1 OCTAVE mode - A5 format .....	8-7
Example of the printed results from the DOSE METER mode - A4 format.....	8-8
Displays with the confirmation request of the paper ejection .....	8-8
Displays during the results printing when there is no transfer (a) and no data (b).....	8-8
REPORT list with the PRINT STATISTICS selected.....	8-8
Display after the attempt to perform an unavailable operation during measurement in progress.....	8-9
Display in the REPORT list, the execution of the PRINT STATISTICS .....	8-9
Displays with the confirmation request of the paper ejection .....	8-9
Example of the printed statistics from the LEVEL METER mode - format A5 .....	8-11
Example of the printed statistics from the DOSE METER mode - format A4.....	8-12
Displays during the statistics printing when there is no transfer (a) and no data (b).....	8-13
REPORT list with the PRINT CATALOGUE selected.....	8-13
Display after the attempt to perform an unavailable operation during measurement in progress.....	8-13
Display in the REPORT list, the execution of the PRINT CATALOGUE .....	8-13
Displays with the confirmation request of the paper ejection .....	8-14
Example of the printed catalogue - format A4 .....	8-14
Example of the printed catalogue - format A5 .....	8-14
Display during the catalogue printing when there is no data transfer .....	8-14
REPORT list with the OPTIONS selected.....	8-15
OPTIONS window; the selection of the format .....	8-15
OPTIONS window; the selection of the paper ejection .....	8-15
Displays with the request for the confirmation of the paper ejection.....	8-16
Display after a printing when there is not possible to eject a paper .....	8-16
Display in the main list; the SETUP text highlighted (displayed inversely) .....	9-1
SETUP list of the instrument .....	9-1
SETUP list, the LANGUAGE text highlighted (displayed inversely) .....	9-2
Language windows with all available languages.....	9-2
Displays with the English version of the user interface .....	9-2
Displays with the Italian version of the user interface .....	9-2
Displays with the Polish version of the user interface.....	9-2
Displays with the Hungarian version of the user interface.....	9-2
Displays with the Flemish version of the user interface.....	9-2
Displays with the French version of the user interface .....	9-3
Displays with the Spanish version of the user interface.....	9-3
SETUP list, the CLEAR SETUP text highlighted (displayed inversely) .....	9-3
Displays with the request for the confirmation for the CLEAR SETUP execution.....	9-3
Displays during and after the execution of the CLEAR SETUP function.....	9-3
SETUP list with the DAY TIME LIMITS text highlighted (displayed inversely).....	9-4
Displays with the available DAY TIME LIMITS.....	9-4
SETUP list with the EXPOSURE TIME text highlighted (displayed inversely) .....	9-4
EXPOSURE TIME windows.....	9-4

EXPOSURE TIME windows (cont.).....	9-5
SETUP list, the EXTERNAL I/O SETUP text highlighted .....	9-5
EXTERNAL I/O SETUP windows; the MODE selection .....	9-5
MEASURE TRIGGER windows; the SOURCE selection.....	9-6
EXTERNAL I/O SETUP windows; the FUNCTION selected .....	9-6
EXTERNAL I/O SETUP windows; the POLARISATION selection .....	9-6
EXTERNAL I/O SETUP windows; the ACTIVE LEVEL selection .....	9-7
EXTERNAL I/O SETUP windows; the SOURCE selection .....	9-7
EXTERNAL I/O SETUP windows; the ALARM LEVEL setting .....	9-7
SETUP list, the MICROPHONE text highlighted (displayed inversely) .....	9-8
MICROPHONE windows; the activation of the COMPENSATION filter .....	9-8
MICROPHONE windows; the activation of the OUTDOOR FILTER.....	9-9
MICROPHONE windows; the activation of the OUTDOOR FILTER.....	9-9
SETUP list with the RMS INTEGRATION text highlighted (displayed inversely) .....	9-9
Displays with the available options of the RMS INTEGRATION.....	9-9
Display in the SETUP list, the RS232 text highlighted (displayed inversely).....	9-10
RS232 windows; the possible settings of the BAUD RATE.....	9-10
RS232 windows; the setting of the TIME OUT .....	9-11
SETUP list, the RTC text highlighted (displayed inversely).....	9-11
RTC windows with the different parameters to be set.....	9-11
SETUP list, the SHIFT MODE text highlighted (displayed inversely).....	9-12
SHIFT MODE windows; the available SHIFT settings .....	9-12
SHIFT MODE windows; the available ST/SP settings .....	9-13
SETUP list, the STATISTICAL LEVELS sub-list selected .....	9-13
Displays in the STATISTICAL LEVELS sub-list .....	9-13
SETUP list, the TIMER text highlighted (displayed inversely) .....	9-14
TIMER windows; the mode selection .....	9-14
TIMER windows; setting day of the instrument's switch on.....	9-14
TIMER windows; setting hour and minute of the instrument's switch on.....	9-15
TIMER windows; setting REPETITION parameter .....	9-15
Exemplary settings made for the desired execution of the TIMER function.....	9-15
Counting down during the warming up of the instrument after switching it on.....	9-16
Displays during the executing of the TIMER function (TIMER icon is active).....	9-16
SETUP list, the USB-HOST PORT text highlighted (displayed inversely) .....	9-16
Display in the USB-HOST PORT .....	9-16
Display during the activation of the USB host's functions.....	9-17
Displays with the different USB disk warnings.....	9-17
Displays in the FILE list, the DIRECTORY window.....	9-18
Displays during the IRDA interface connection.....	9-19
SETUP list, the WARNINGS text highlighted (displayed inversely) .....	9-19
WARNINGS windows; RESULTS NOT SAVED selected.....	9-19
View of the displays with LAST RESULTS NOT SAVE warning.....	9-19
WARNINGS windows; USB DISK FREE SP. selected .....	9-20
WARNINGS windows; MIN FREE SPACE selection .....	9-20
Display with USB DISK FREE SPACE warning.....	9-20
Displays in 1/1 OCTAVE analysis in the SPECTRUM display mode.....	10-1
Main list with FUNCTION text selected (a), FUNCTION list opened with MEASUREMENT FUNCTION text selected (b), 1/1 OCTAVE mode activated in MEASUREMENT FUNCTION window (c) .....	10-1
Display with the text informing the user about the currently performed measurements.....	10-2
MEASUREMENT RANGE window in 1/1 OCTAVE analyser.....	10-2
MEASUREMENT RANGE window not accessible during the measurement.....	10-3
SPECTRUM windows with selection of the weighting filter .....	10-3
Spectrum windows with disabled and enabled savings of 1/1 OCTAVE spectrum .....	10-3
LOGGER TRIGGER windows; the selection of the signal used for triggering .....	10-4
Main list, DISPLAY list and DISPLAY MODES window with available modes of presentation.....	10-4
Displays in 1/1 OCTAVE analysis in one-profile mode .....	10-5
Displays with the change of the size of characters in one-profile mode.....	10-5
Displays in 1/1 OCTAVE analysis with the shifted horizontal axis in relation to vertical one .....	10-5

3 PROFILES presentation mode with the dotted lines stating the instrument does not work in SLM mode (a) and the continuous lines in SLM mode (b).....	10-5
Displays with the different 3 PROFILE presentation mode.....	10-6
Displays in 1/1 OCTAVE analysis with presentation of the statistical analysis in all profiles .....	10-6
1/1 OCTAVE spectrum and the statistical analysis performed for selected 1/1 OCTAVE band (here: 1 kHz)..	10-6
Displays with 1/1 OCTAVE spectrum, after entering the presentation of the statistical analysis results performed for the selected 1/1 OCTAVE filter and after entering 1/1 OCTAVE spectrum of the LN....	10-7
Displays with 1/1 OCTAVE spectrum of LN, after return to the presentation of the statistical analysis results performed for the selected 1/1 OCTAVE filter and after return to the presentation of 1/1 OCTAVE spectrum .....	10-7
Presentation of the statistical analysis results performed for TOTAL results of 1/1 OCTAVE analysis .....	10-7
Displays after pressing <ESC> push-button in 1/1 OCTAVE spectrum of LN while TOTAL C value was selected and after another pressing of <ESC> push-button - return to presentation of 1/1 OCTAVE spectrum .....	10-7
Displays in 1/1 OCTAVE analysis in LOGGER mode; registered results from all profiles .....	10-8
FILE INFO window with the name of the file being written and with information about already saved file.....	10-8
1/1 OCTAVE analysis results presented with different value of DYNAMIC selected in DISPLAY SCALE....	10-9
1/1 OCTAVE analysis results presented with different value of X-ZOOM selected in DISPLAY SCALE .....	10-9
Displays in 1/1 OCTAVE SPECTRUM with different X-ZOOM parameter .....	10-9
GRID option selection and switching it on and off.....	10-10
1/1 OCTAVE spectrum presented without and with GRID .....	10-10
1/1 OCTAVE analysis results presented with different value of VIEW selected in SPECTRUM VIEW .....	10-10
NORMAL view of the display with the results of 1/1 OCTAVE analysis actually performed .....	10-11
Presentation of different 1/1 OCTAVE spectra .....	10-11
Displays with MAX and/or MIN spectrum switched on and off.....	10-11
Displays with MAX (a), MIN (b) or both, MAX and MIN (c) spectra presented together with averaged one.	10-12
Displays with 1/1 OCTAVE spectra saved in the logger with 500 ms step .....	10-12
Effect of mechanical vibration perpendicular to the plane of microphone diaphragm.....	C-5
Effect of mechanical vibration parallel to the plane of microphone diaphragm.....	C-5
Effect of extension cable for the measurements with Z filter for $U_{in}=1V_{RMS}$ .....	C-7
Effect of the SA 22 windscreen .....	C-7
Typical free field frequency response of the SVAN 953 .....	C-8
Directional response of SVAN 953 with ACO 7052S microphone and SV 12 preamplifier for given frequencies.....	C-14
Total directional characteristics of SVAN 953 with ACO 7052S microphone and SV 12 preamplifier .....	C-15
TNC connector (external view) .....	C-25
Power supply connector 5.5 / 2.1 mm (external view).....	C-26
RCA Jack - "Cinch" (external view).....	C-26
USB socket (external view) .....	C-28
USB socket (external view) .....	C-28
Results shown in the first presentation mode of statistical levels.....	D-7
Results shown in the second presentation mode; the selection of the statistical level.....	D-7
Results shown in both presentation modes of statistical levels; the change of the mode .....	D-7
INPUT and PROFILE (x) windows; weighting filter selection .....	D-10
Full (a) and low band (b) frequency characteristics of Z filter implemented in the instrument .....	D-11
Frequency characteristics of A filter implemented in the instrument.....	D-11
Frequency characteristics of C filter implemented in the instrument.....	D-12
SETUP and MICROPHONE windows; the activation of ENVIRONMENTAL filter .....	D-13
Frequency characteristics of ENVIRONMENTAL filter.....	D-13
SETUP and MICROPHONE windows; the activation of AIRPORT filter .....	D-13
Frequency characteristics of AIRPORT filter.....	D-14
Characteristics of the exemplary digital 1/1 OCTAVE filter implemented in the instrument.....	D-14